


GARDENTOP

TRIMAX

Montageanleitung
Installation instruction

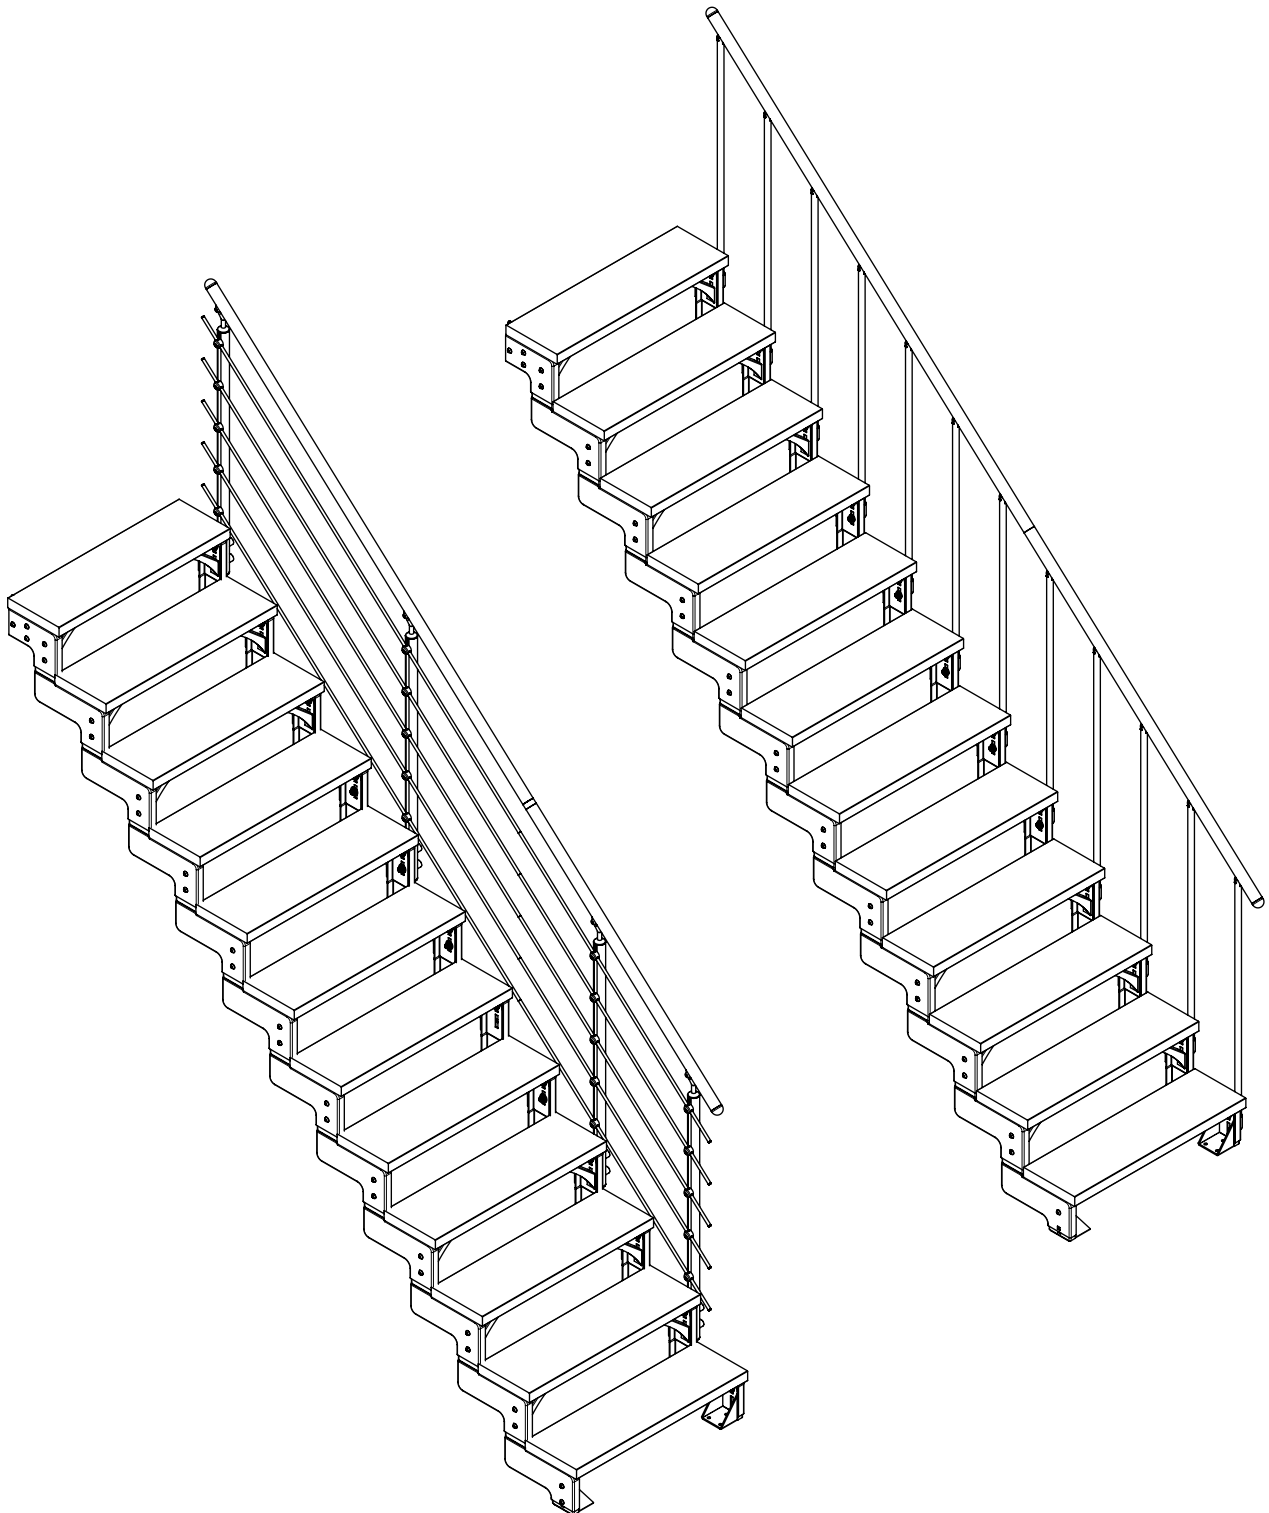


1068015		Starter-Set Start kit			
<p>1 2</p> <p>× 1 K1-41430</p> <p>× 1 K1-41930</p>		<p>7 8</p> <p>× 1 K1-41911</p> <p>× 1 K1-41910</p>		<p>5</p> <p>× 2 K2-41900</p>	
				<p>6</p> <p>× 2 K1-41940</p>	
<p>40</p> <p>× 14 K3-02045 M10×25</p>	<p>41</p> <p>× 2 K3-04110 Ø10</p>	<p>42</p> <p>× 8 K3-04198 Ø10</p>	<p>43</p> <p>× 14 K3-03051 M10</p>	<p>44</p> <p>× 12 K3-08001 Ø12 x 60</p>	<p>45</p> <p>× 12 K3-06070 Ø10 x 60</p>
<p>59</p> <p>× 12 K3-06269 Ø6 x 35</p>	<p>63</p> <p>× 4 K3-05022 M8 x 20</p>	<p>64</p> <p>× 12 K3-04010 Ø10,5</p>			

1068016		Ergänzungs-Set 1 step kit			
<p>3 4</p> <p>× 1 K1-41921</p> <p>× 1 K1-41920</p>		<p>40</p> <p>× 4 K3-02045 M10 x 25</p>	<p>42</p> <p>× 4 K3-04198 Ø10</p>	<p>43</p> <p>× 4 K3-03051 M10</p>	
		<p>59</p> <p>× 6 K3-06269 Ø6 x 35</p>			



1068020





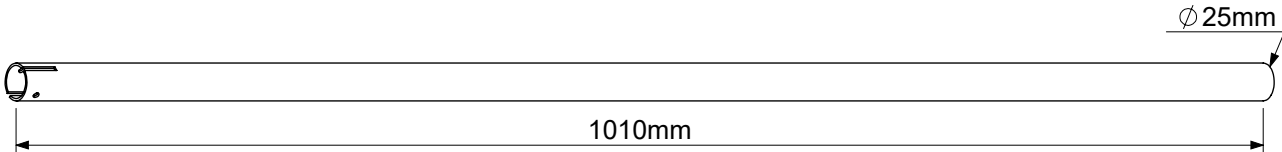





Stufen-Winkel
Step support 1 step


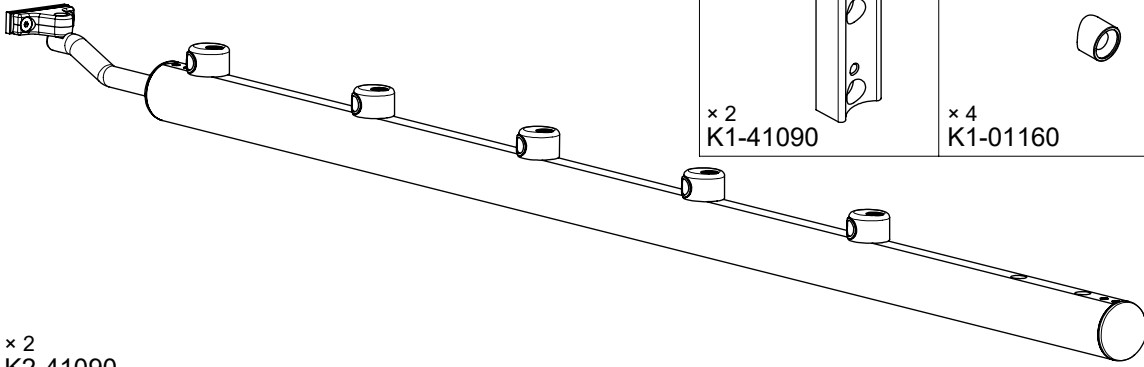


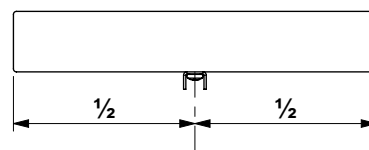
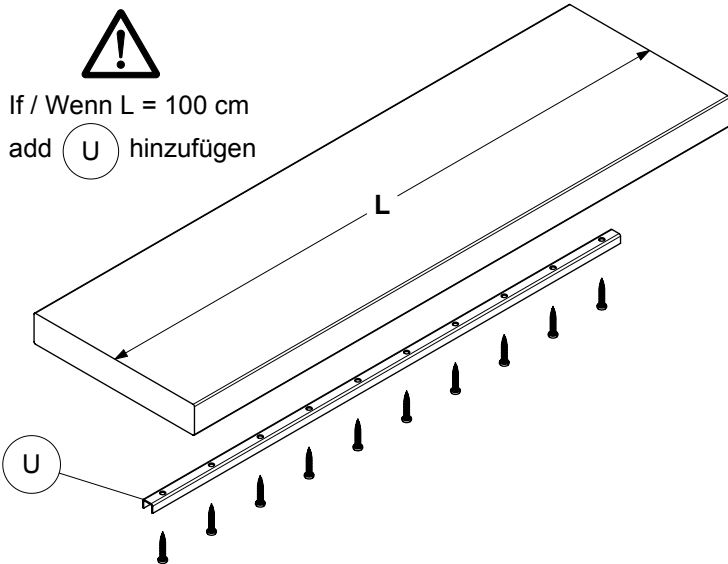



 If more than 6 steps: Add 9 + 10 Wenn mehr als 6 Stufen: 9 + 10 hinzufügen Max. 6 Satz sets	9 10 x1 K1-41060 x1 K1-41061	40 x2 K3-02045 M10 x 25	43 x2 K3-03051 M10	58 x2 K3-02386 M8 x 40
	59 x1 K3-06269 Ø6 x 35	61 x2 K3-03047 M8	65 x2 K3-04099 Ø10	

Trimax-Stufe **80 cm / 100 cm**
Trimax step

11 	59 x6 K3-06269 Ø6x35
------------	------------------------------------
















1068031		<i>Steiggeländer für 6 Stufen</i> <i>Standard banister for 6 steps</i>	
<p>14</p>  <p>× 6 K2-41052</p>	<p>15</p>  <p>× 1 K1-01221</p>	<p>16</p>  <p>× 6 K1-02130</p>	<p>17</p>  <p>× 2 K2-04040</p>
<p>18</p>  <p>× 6 K1-41056</p> <p>1010mm</p> <p>Ø 25mm</p>			
<p>19</p>  <p>× 1 K1-01100</p> <p>Ø 40mm</p> <p>2000mm</p>			
<p>46</p>  <p>× 6 K3-01034 M4 x 30</p>	<p>47</p>  <p>× 6 K3-03004 M4</p>	<p>48</p>  <p>× 12 K3-05006 M6 x 8</p>	<p>68</p>  <p>× 16 K3-05052 M5 x 16</p>

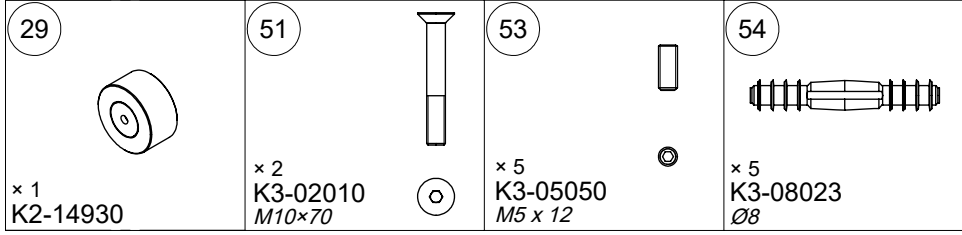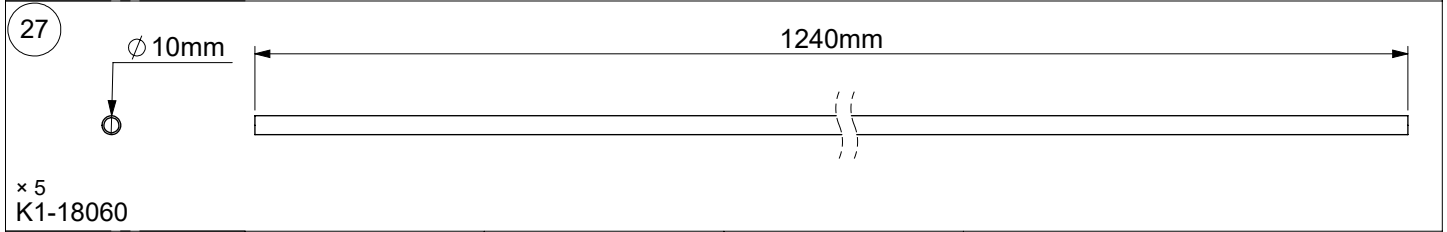
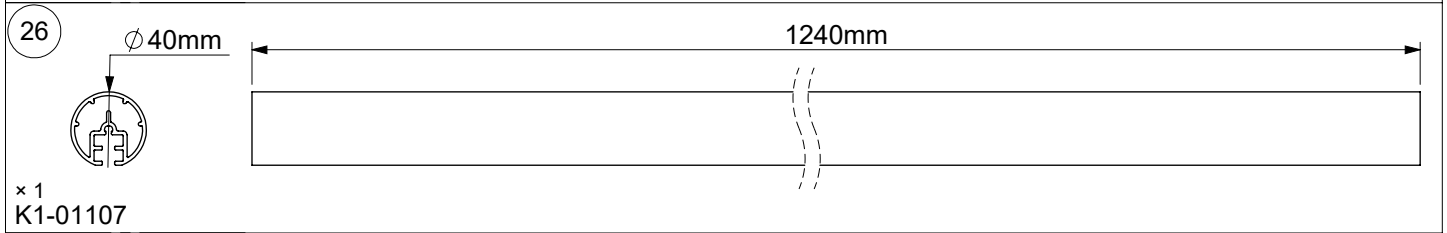
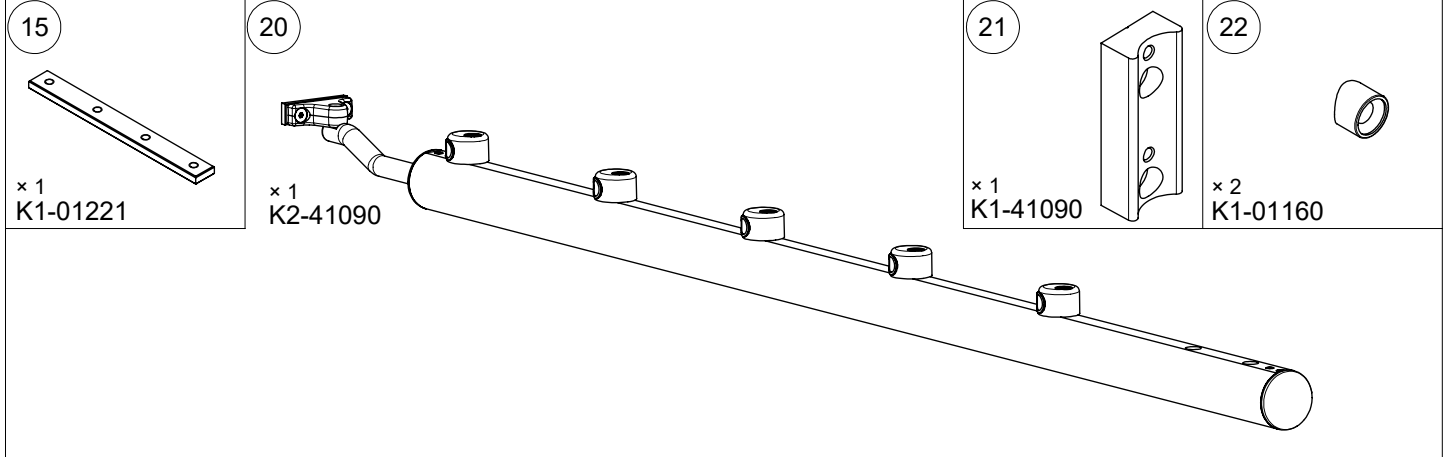
1068040		<i>Steiggeländer PROVA Starter-Set für 4 Stufen</i> <i>PROVA banister start for 4 steps</i>		
<p>17</p>  <p>× 2 K2-04040</p>	<p>20</p>  <p>× 2 K2-41090</p>		<p>21</p>  <p>× 2 K1-41090</p>	<p>22</p>  <p>× 4 K1-01160</p>
<p>26</p>  <p>× 1 K1-01107</p> <p>Ø 40mm</p> <p>1240mm</p>				
<p>27</p>  <p>× 5 K1-18060</p> <p>Ø 10mm</p> <p>1240mm</p>				
<p>28</p>  <p>× 10 K1-01010</p>	<p>29</p>  <p>× 1 K2-14930</p>	<p>51</p>  <p>× 4 K3-02010 M10 x 70</p>		


1068041

Steiggeländer PROVA Ergänzungs-Set für 4 Stufen
PROVA banister extension for 4 steps






1068098		<i>Unterstützung Support</i>			OPTION	
<p>24</p>  <p>× 1 K1-41950</p>	<p>26</p>  <p>× 1 K1-41955</p>	<p>27</p>  <p>× 1 K1-41956</p>	<p>41</p>  <p>× 1 K3-04110 Ø10</p>	<p>43</p>  <p>× 1 K3-03051 M10</p>	<p>52</p>  <p>× 1 K3-02375 M10 x 75</p>	
	<p>53</p>  <p>× 2 K3-05007 M5 x 5</p>	<p>54</p>  <p>× 1 K3-08002 Ø8 x 40</p>	<p>55</p>  <p>× 1 K3-06032 Ø6 x 60</p>			

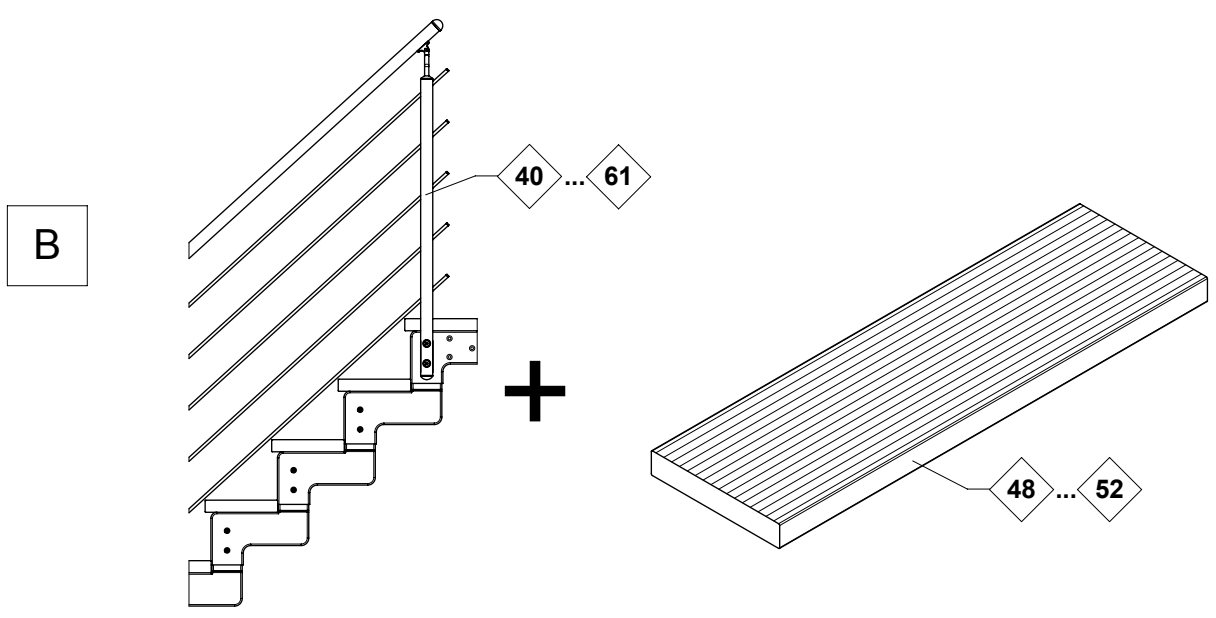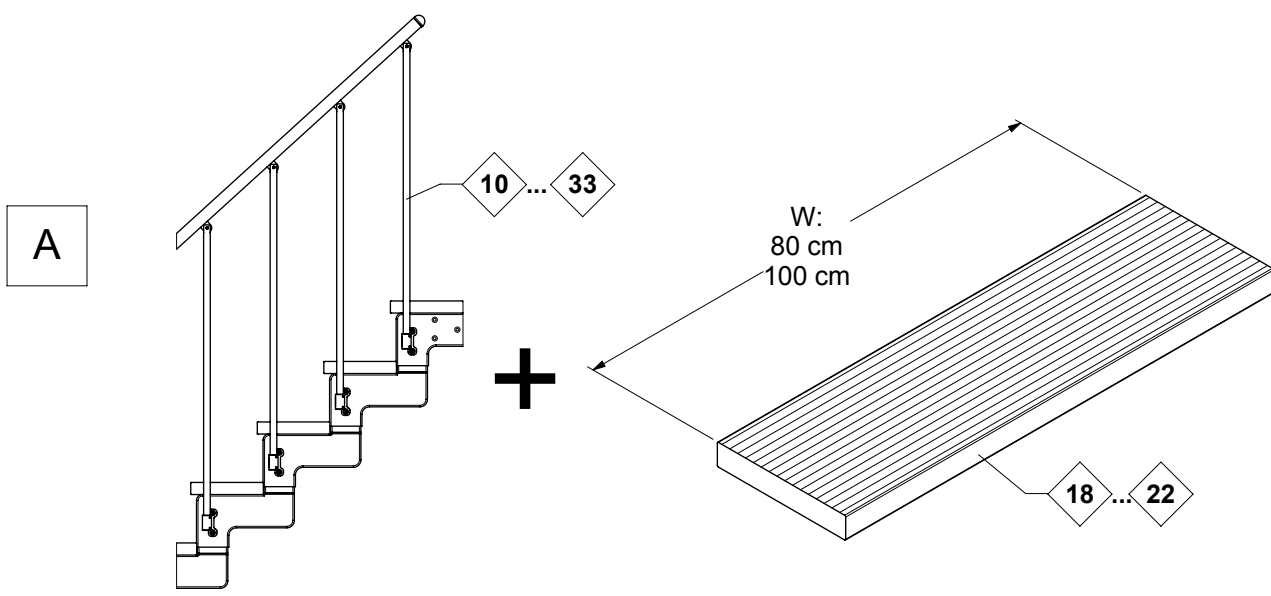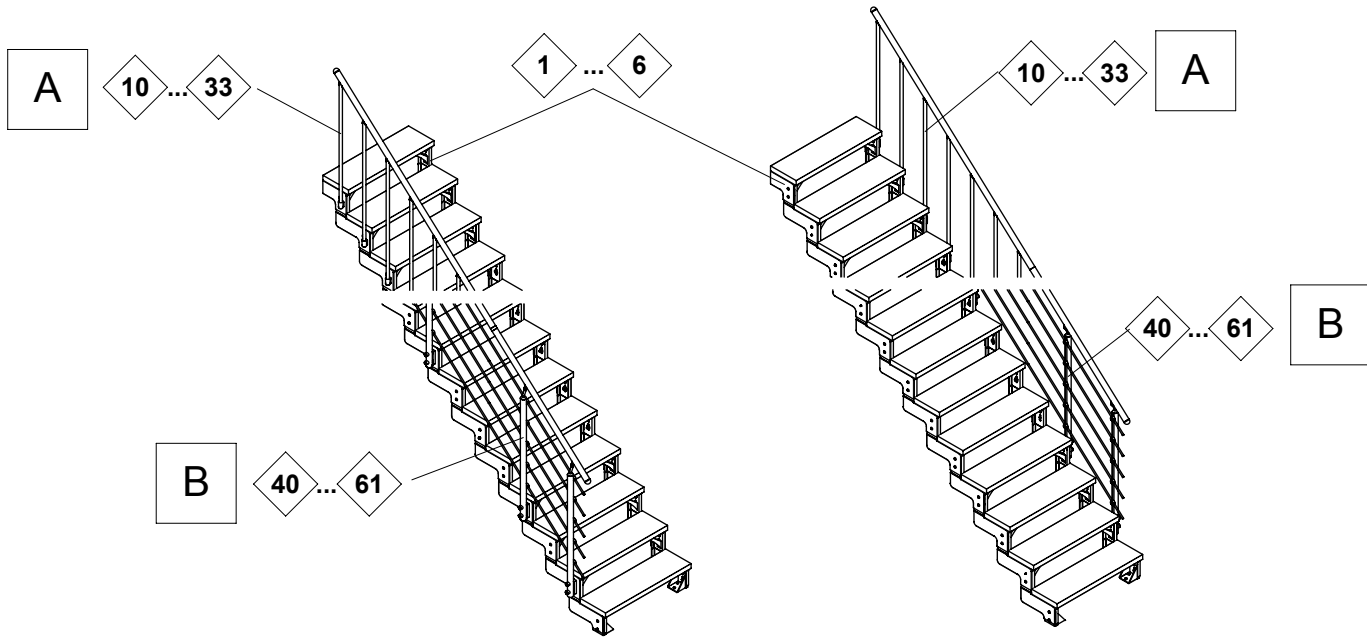




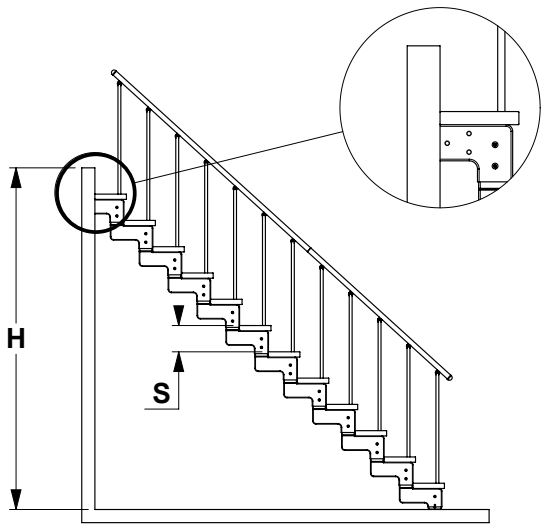






H	S				
	180	190	200	210	220
	mm	mm	mm	mm	mm
2	540	570	600	630	660
3	720	760	800	840	880
4	900	950	1000	1050	1100
5	1080	1140	1200	1260	1320
6	1260	1330	1400	1470	1540
7	1440	1520	1600	1680	1760
8	1620	1710	1800	1890	1980
9	1800	1900	2000	2100	2200
10	1980	2090	2200	2310	2420
11	2160	2280	2400	2520	2640
12	2340	2470	2600	2730	2860

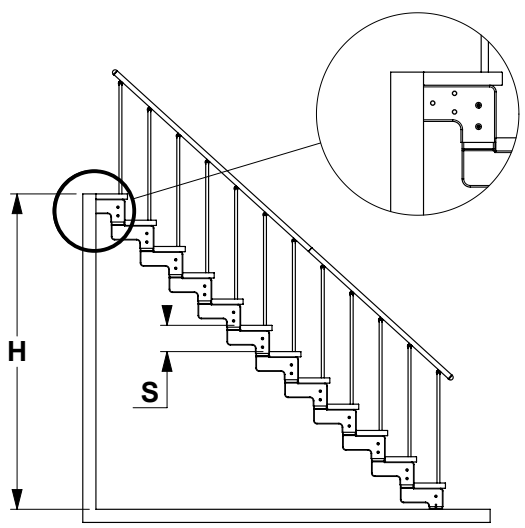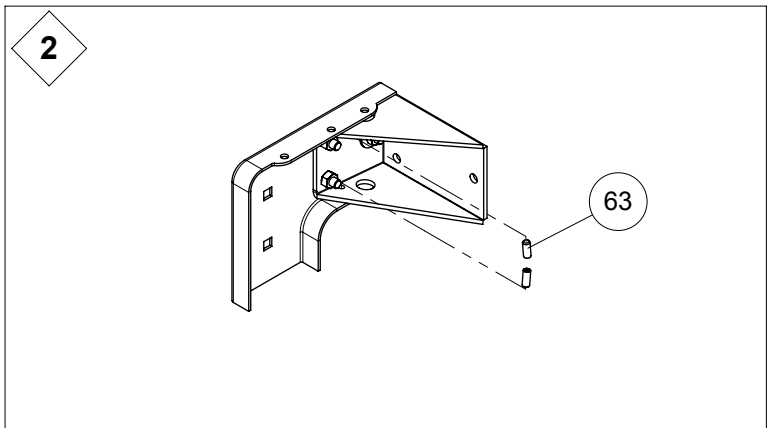
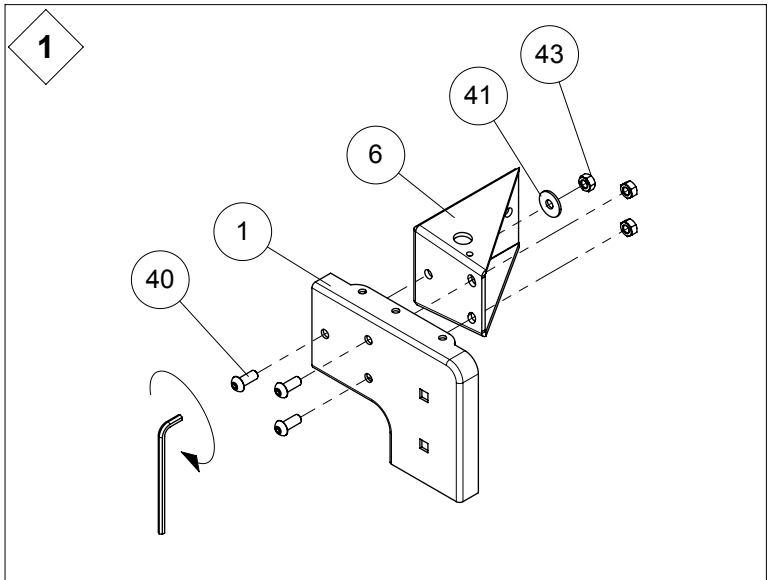


H	S				
	180	190	200	210	220
	mm	mm	mm	mm	mm
2	360	380	400	420	440
3	540	570	600	630	660
4	720	760	800	840	880
5	900	950	1000	1050	1100
6	1080	1140	1200	1260	1320
7	1260	1330	1400	1470	1540
8	1440	1520	1600	1680	1760
9	1620	1710	1800	1890	1980
10	1800	1900	2000	2100	2200
11	1980	2090	2200	2310	2420
12	2160	2280	2400	2520	2640

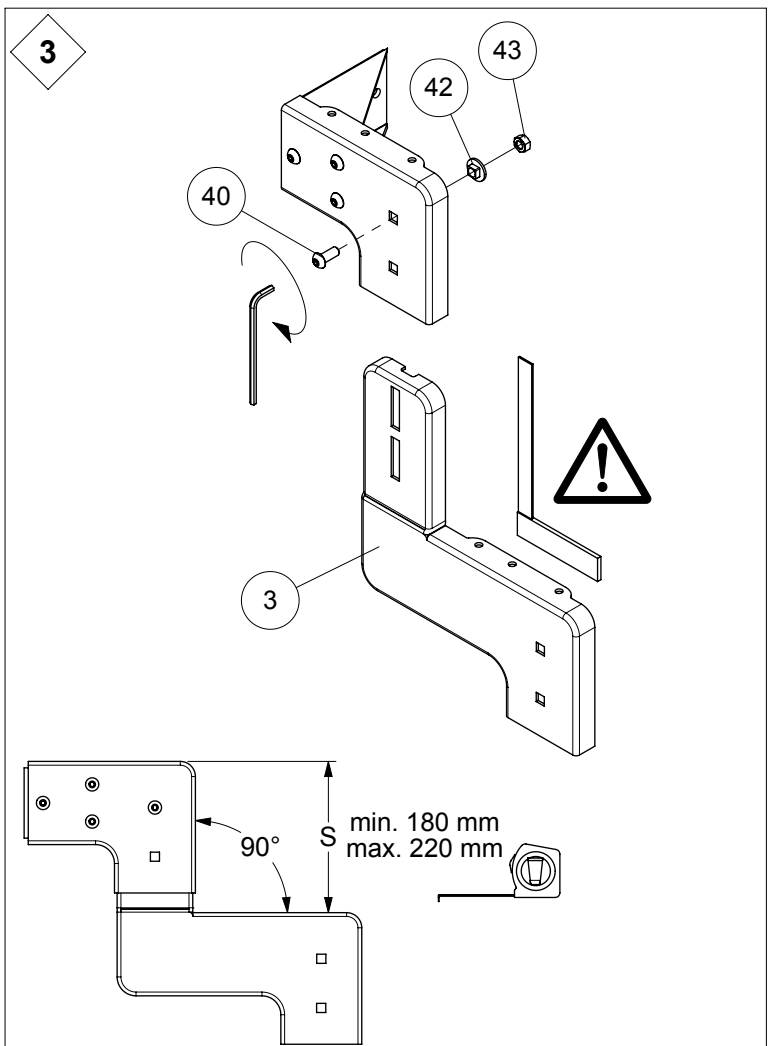

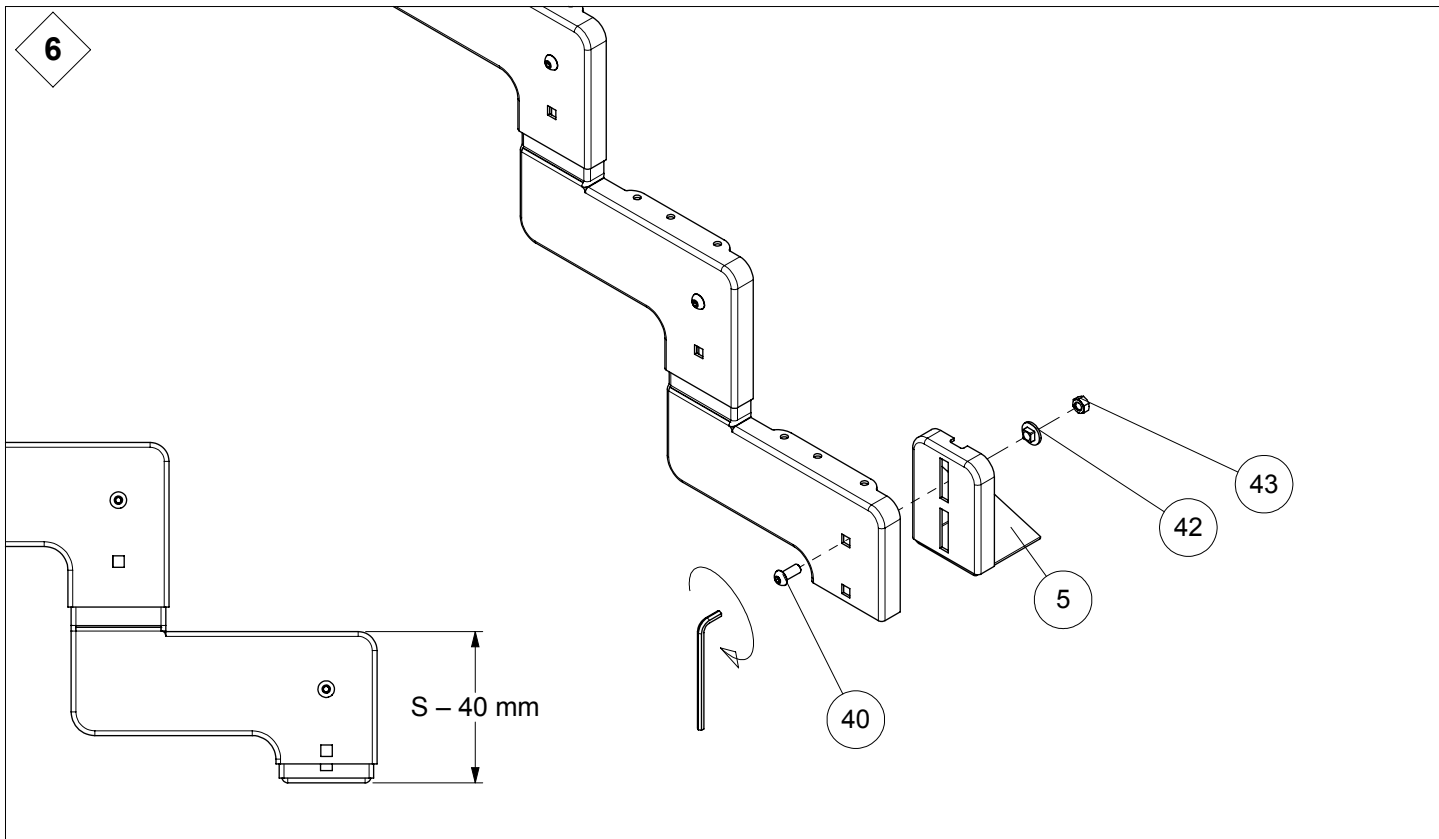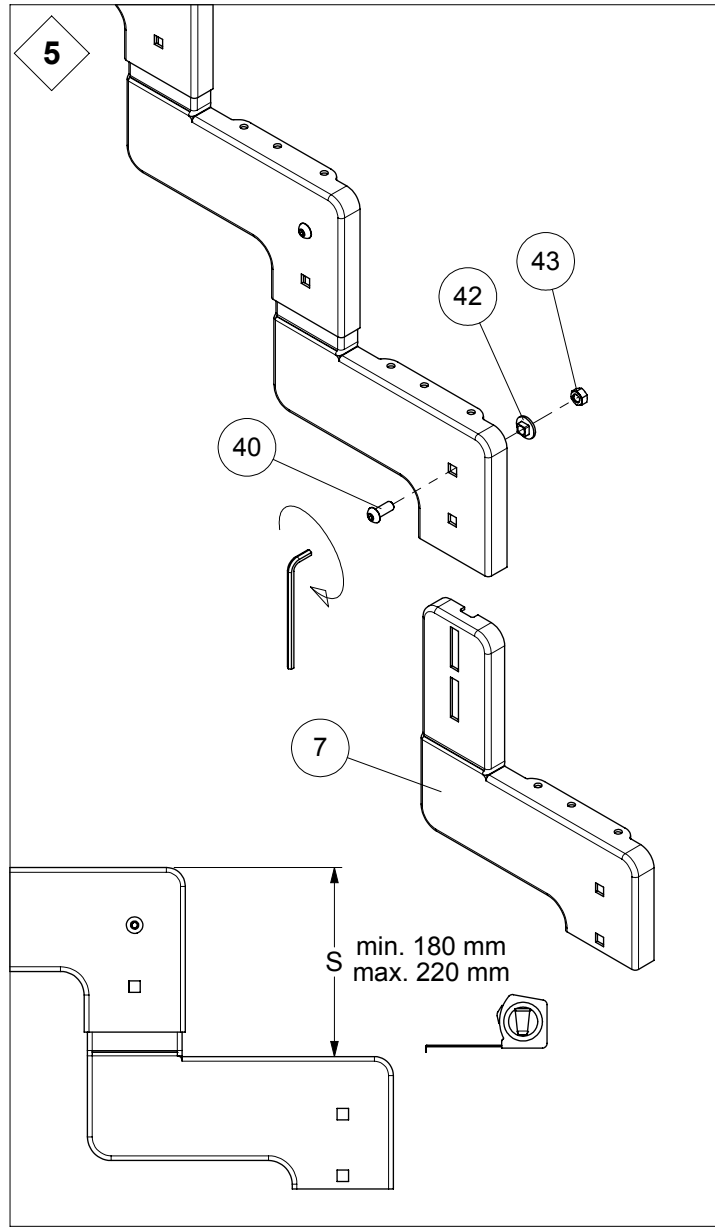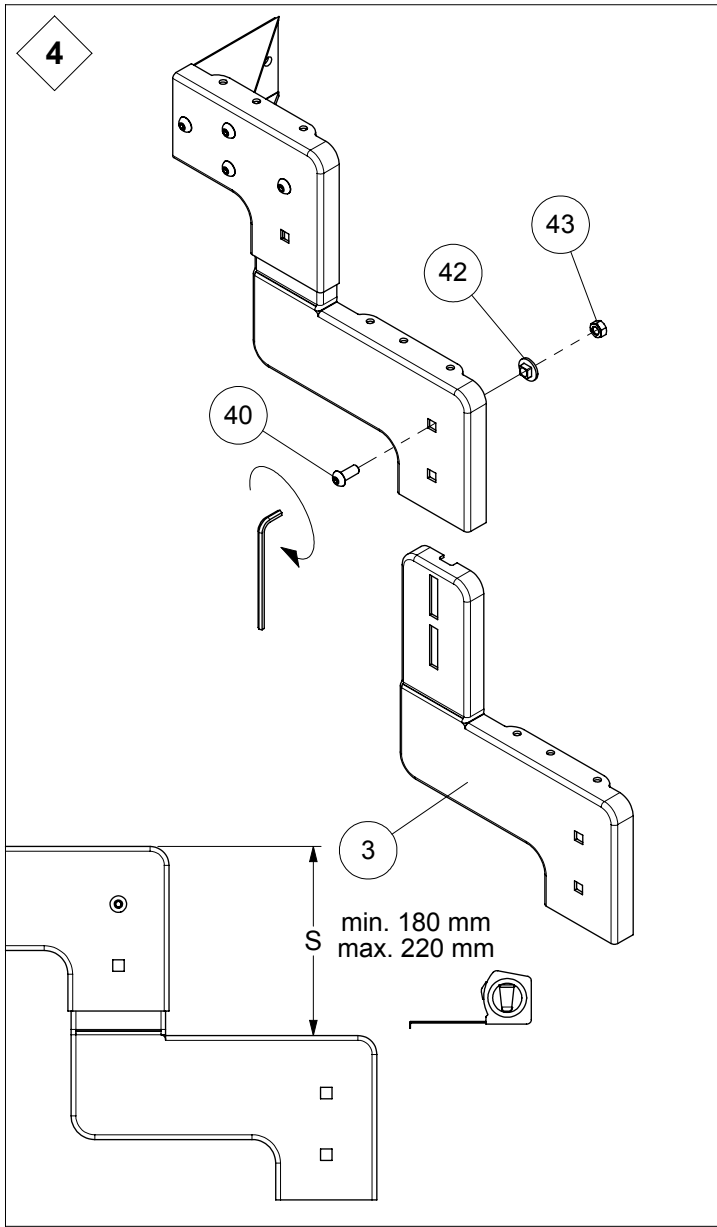

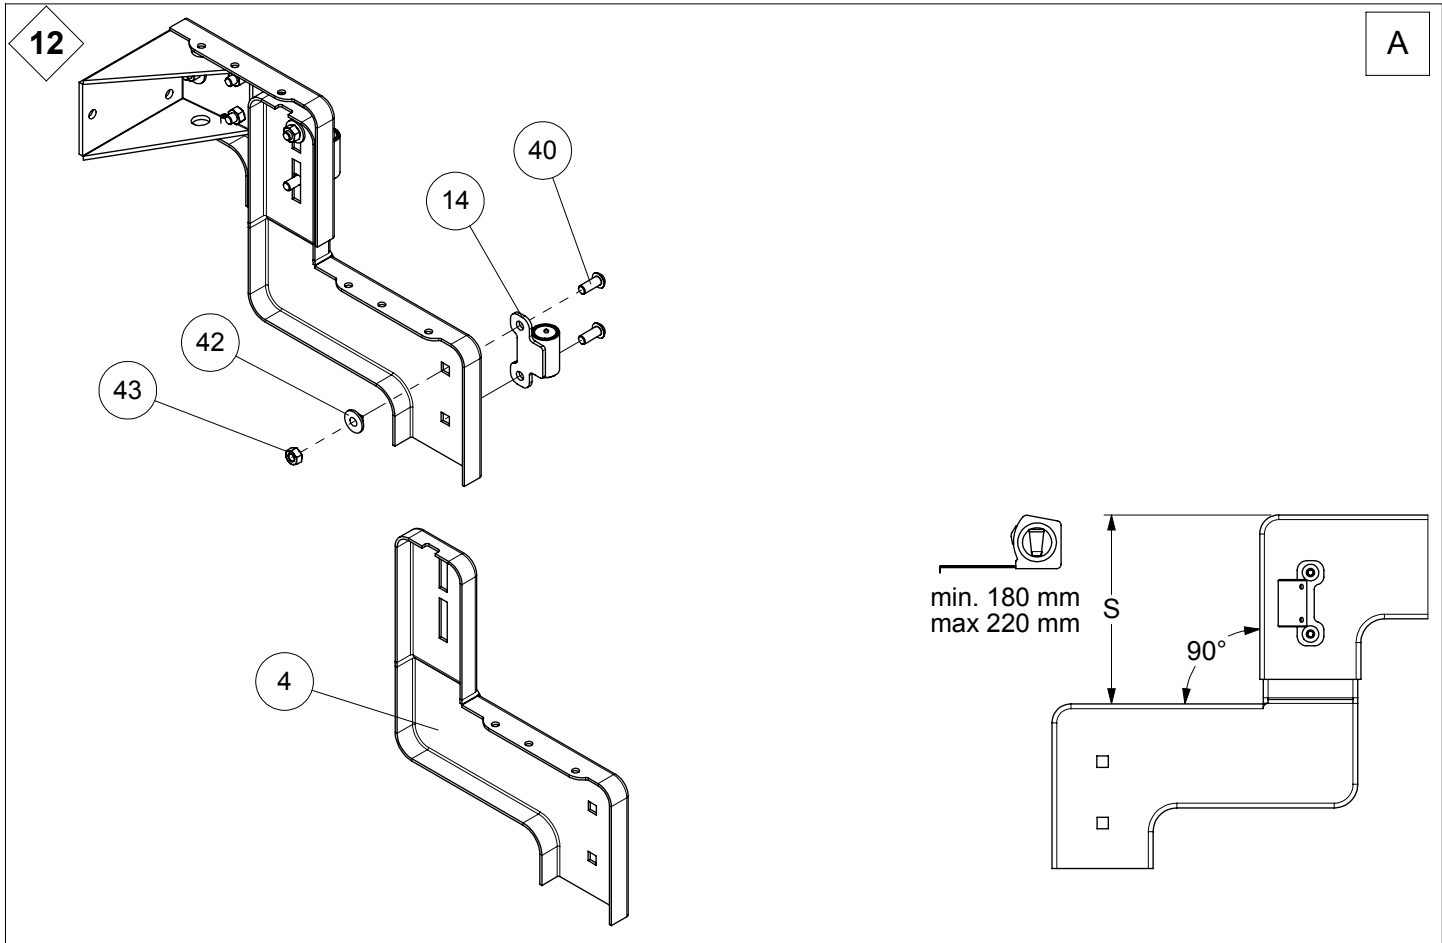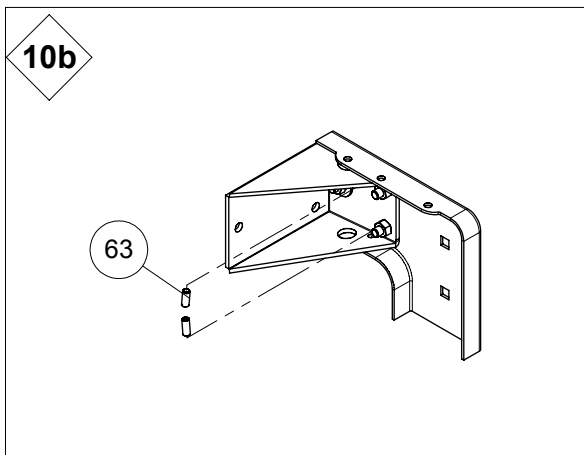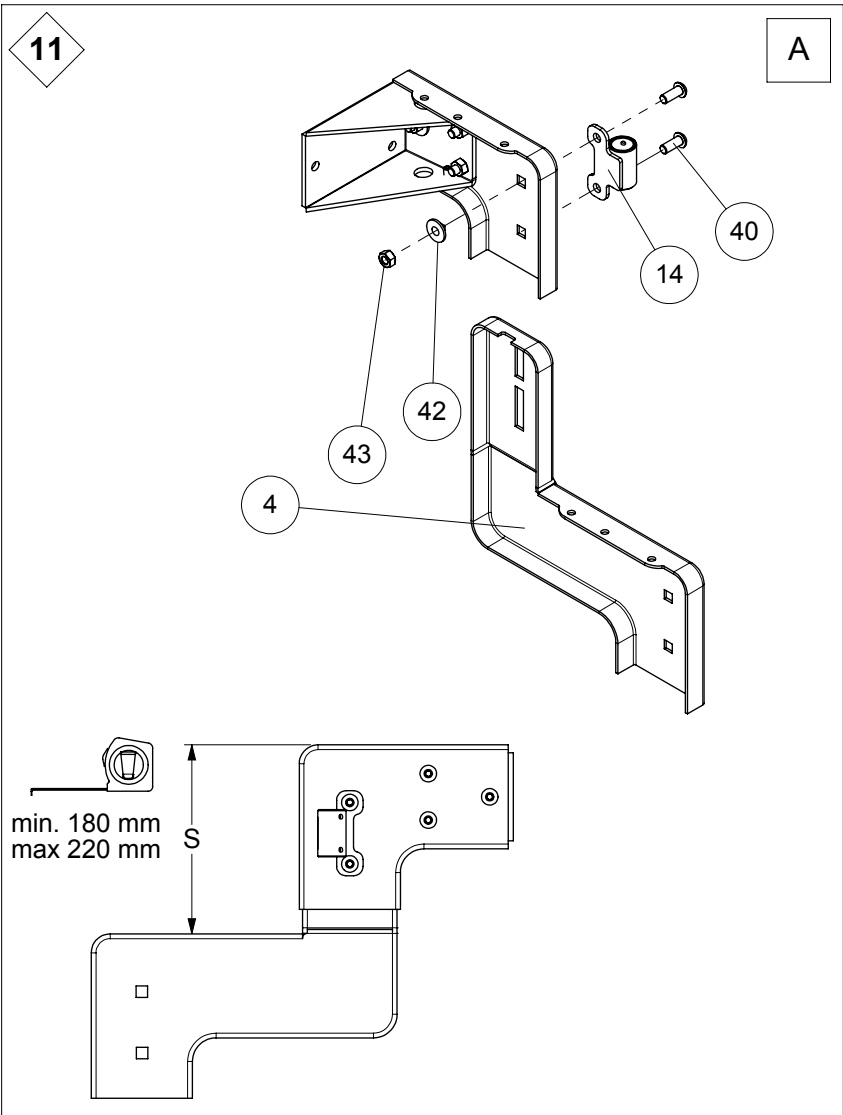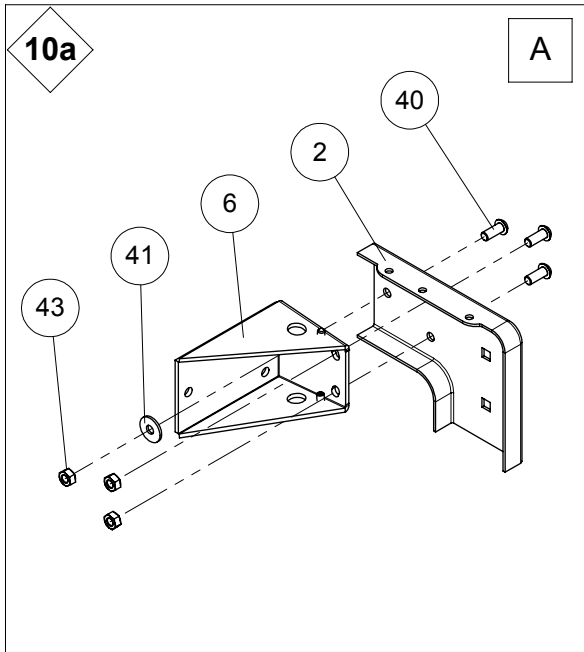


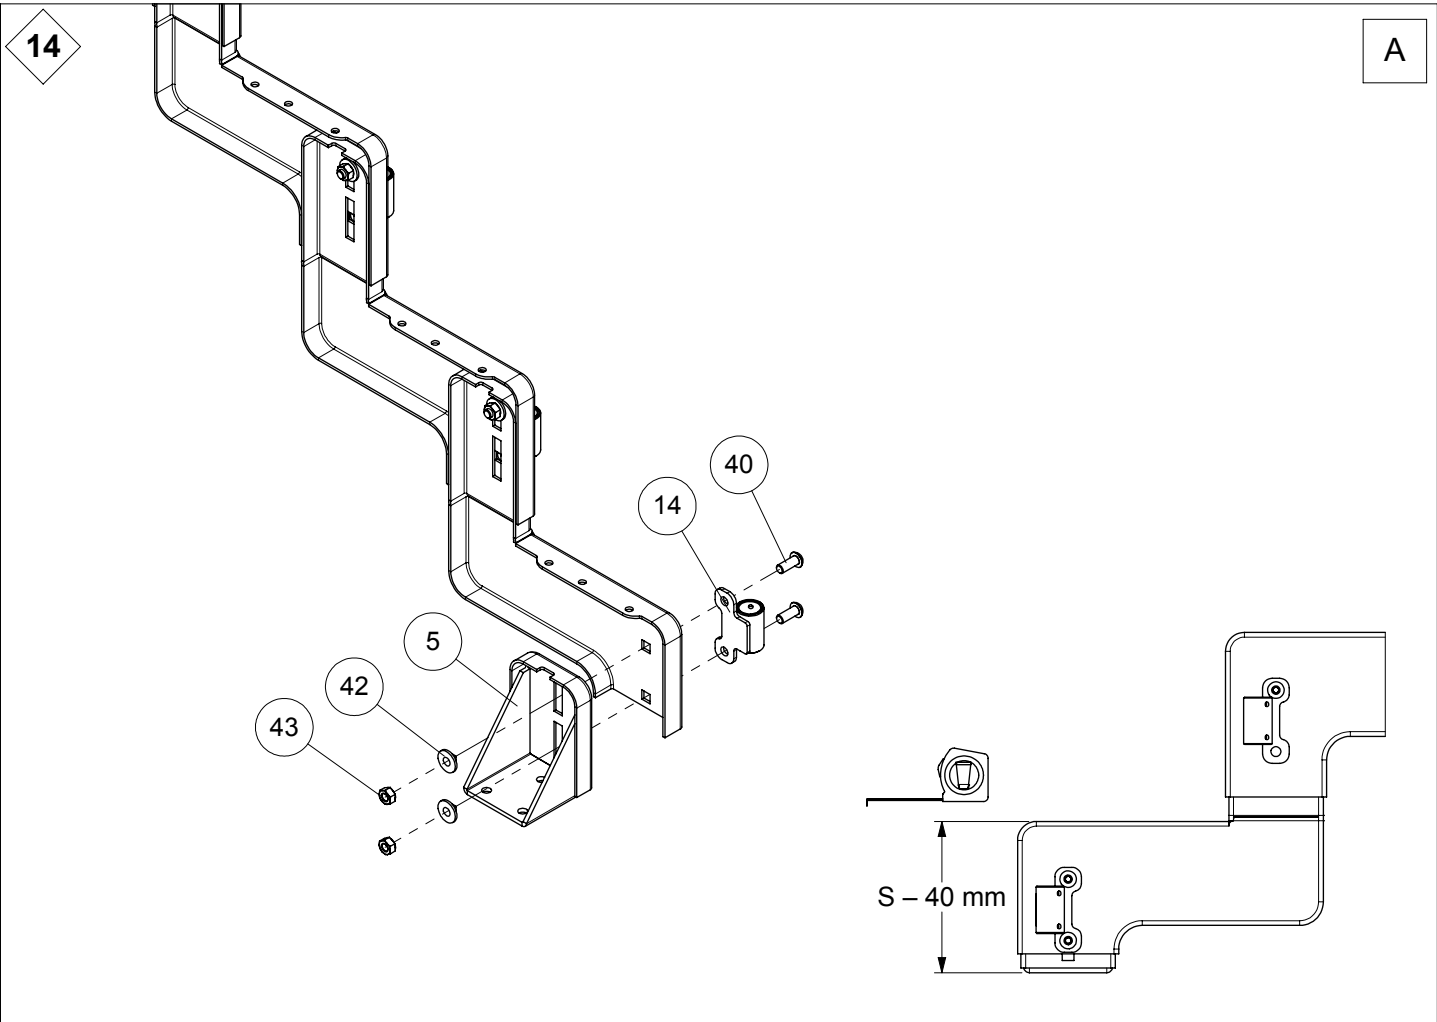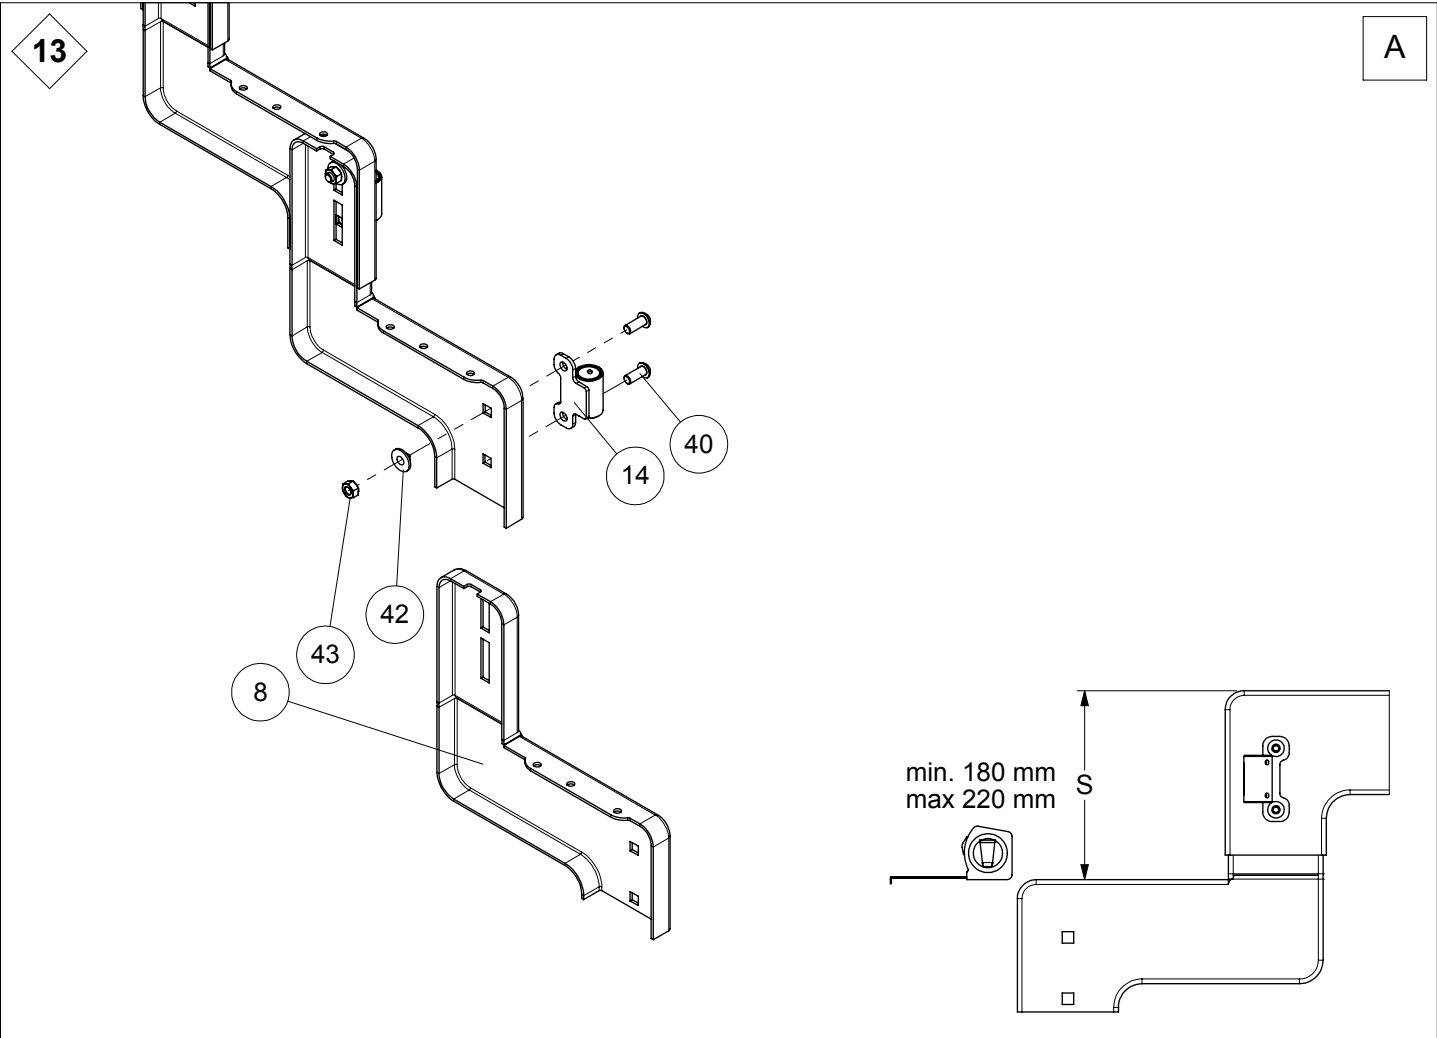

15


A

Stufe / Step	W
80 cm	803 mm
100 cm	1003 mm

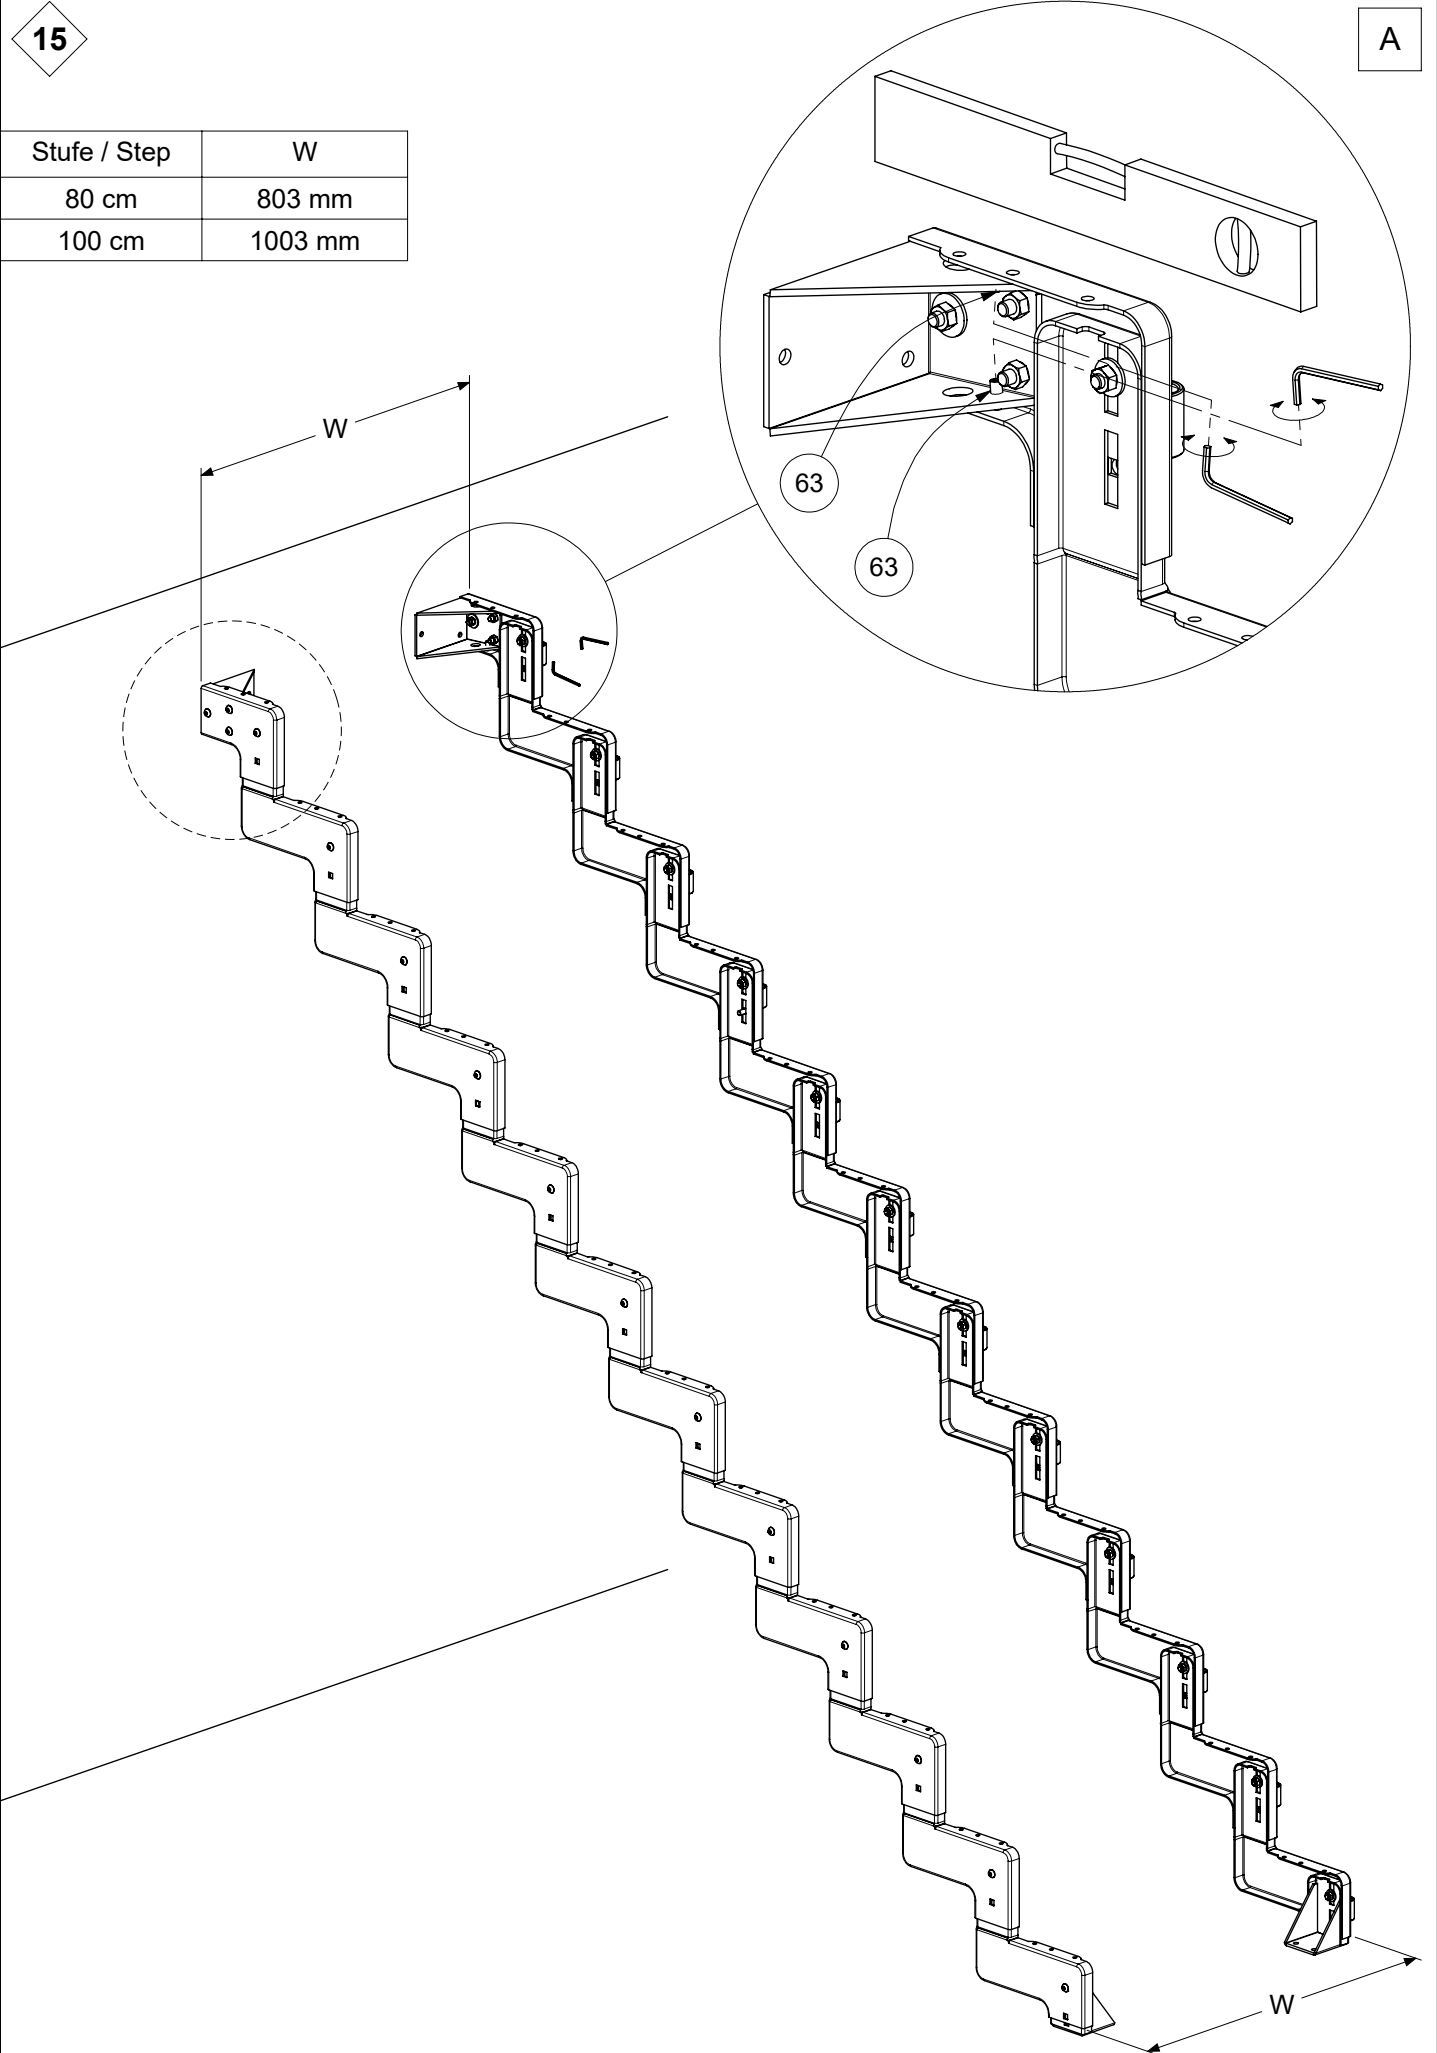

16

A

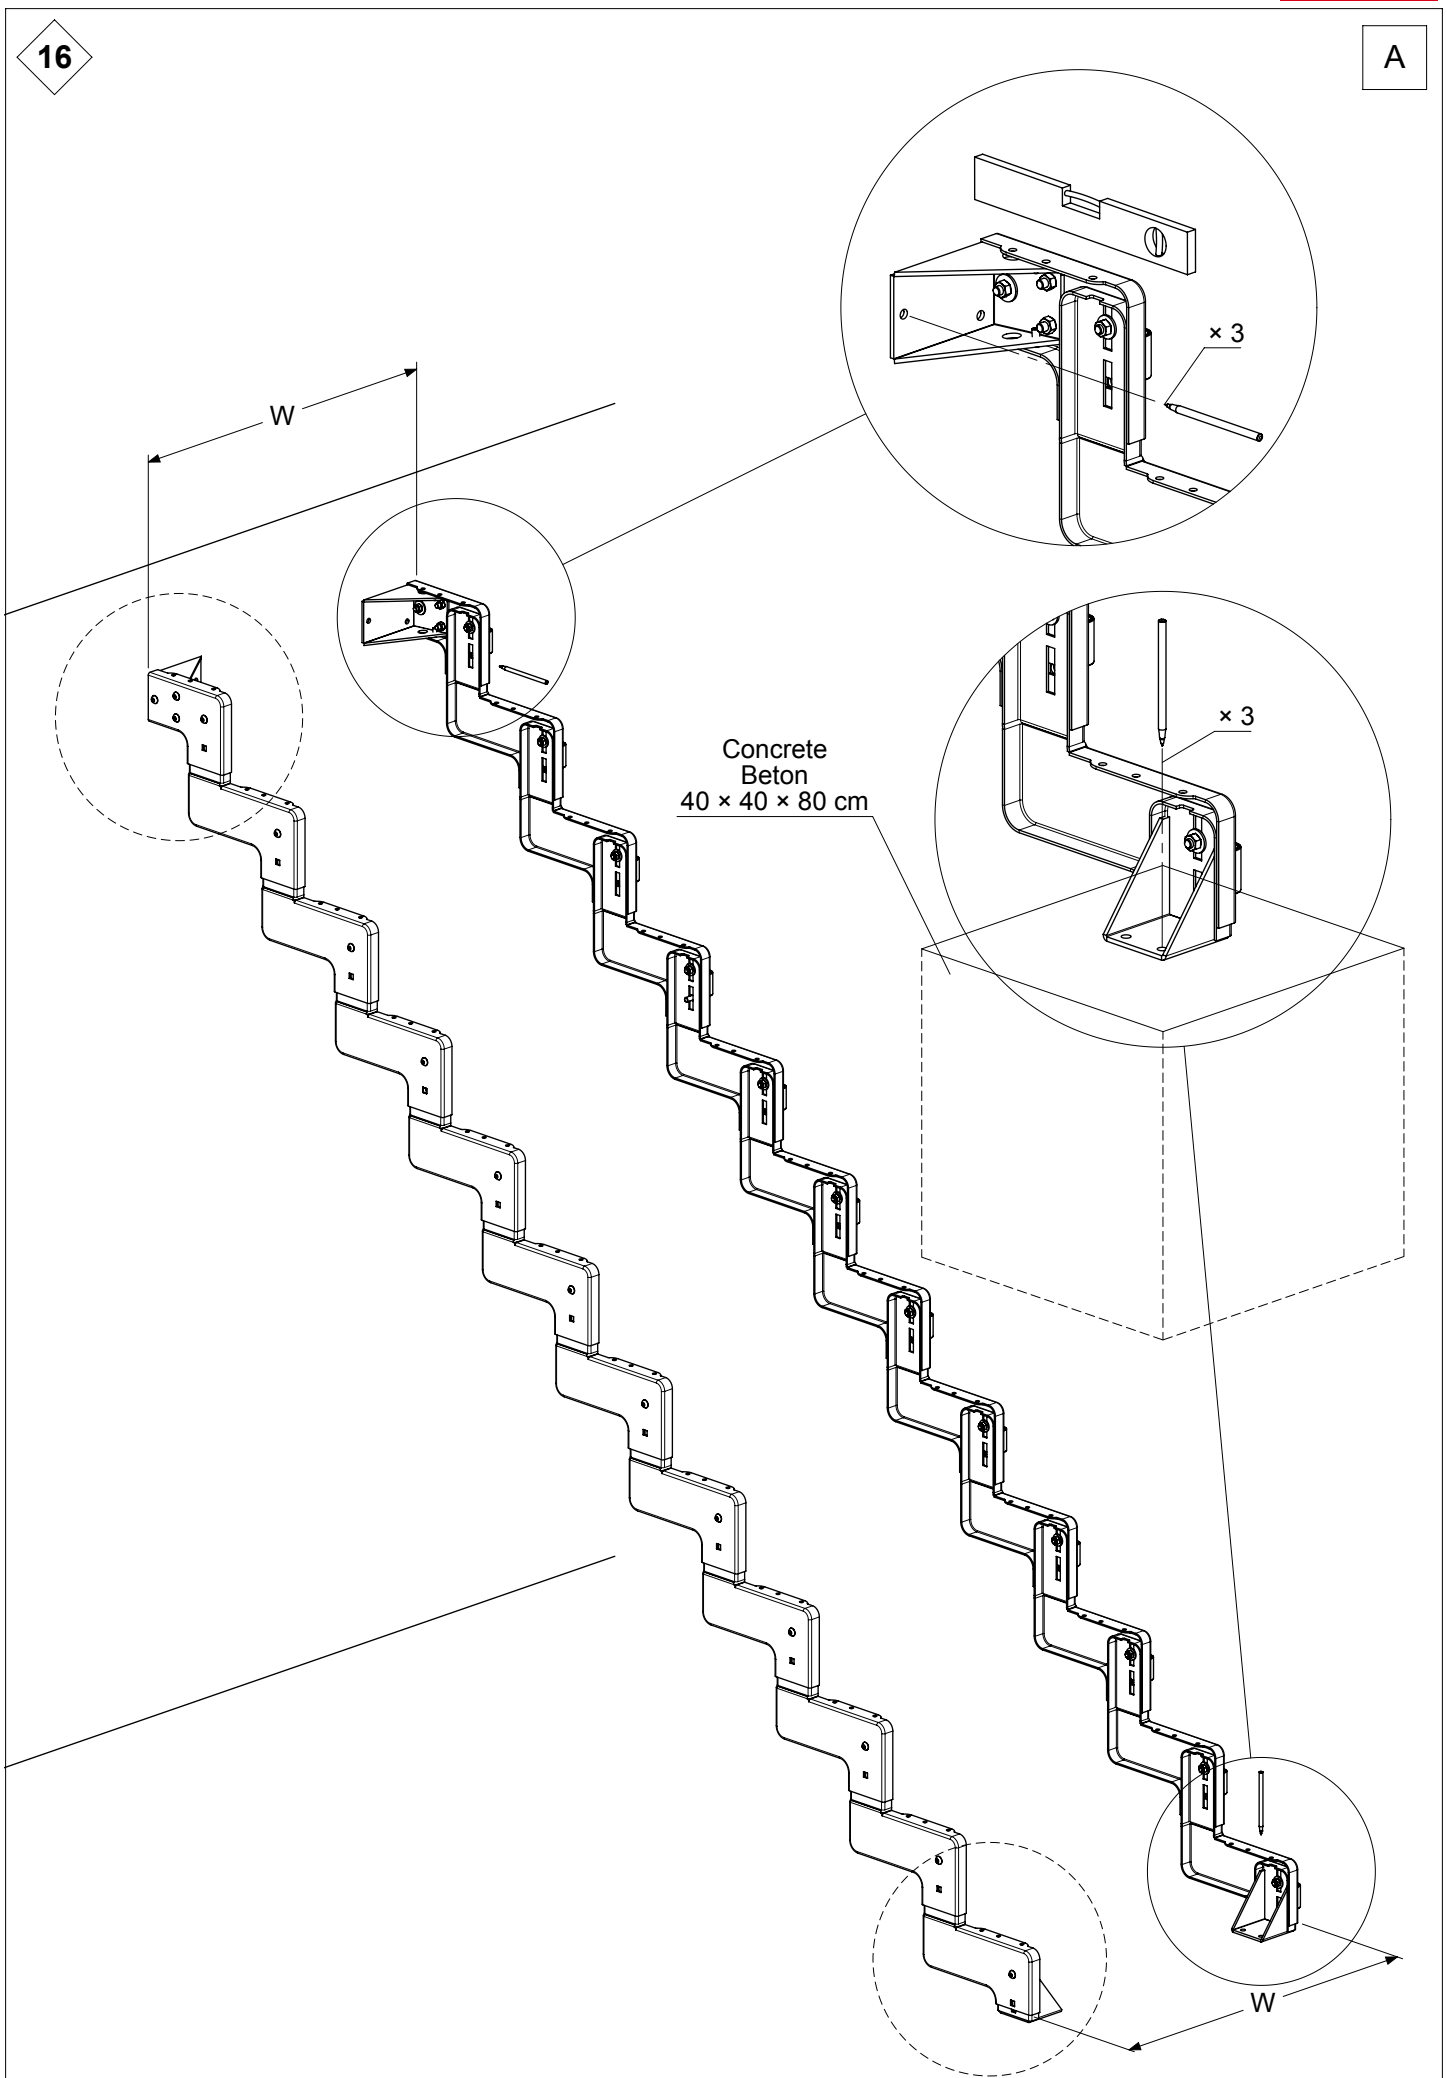

Concrete
Beton
40 x 40 x 80 cm


x 3


x 3

W

17

A



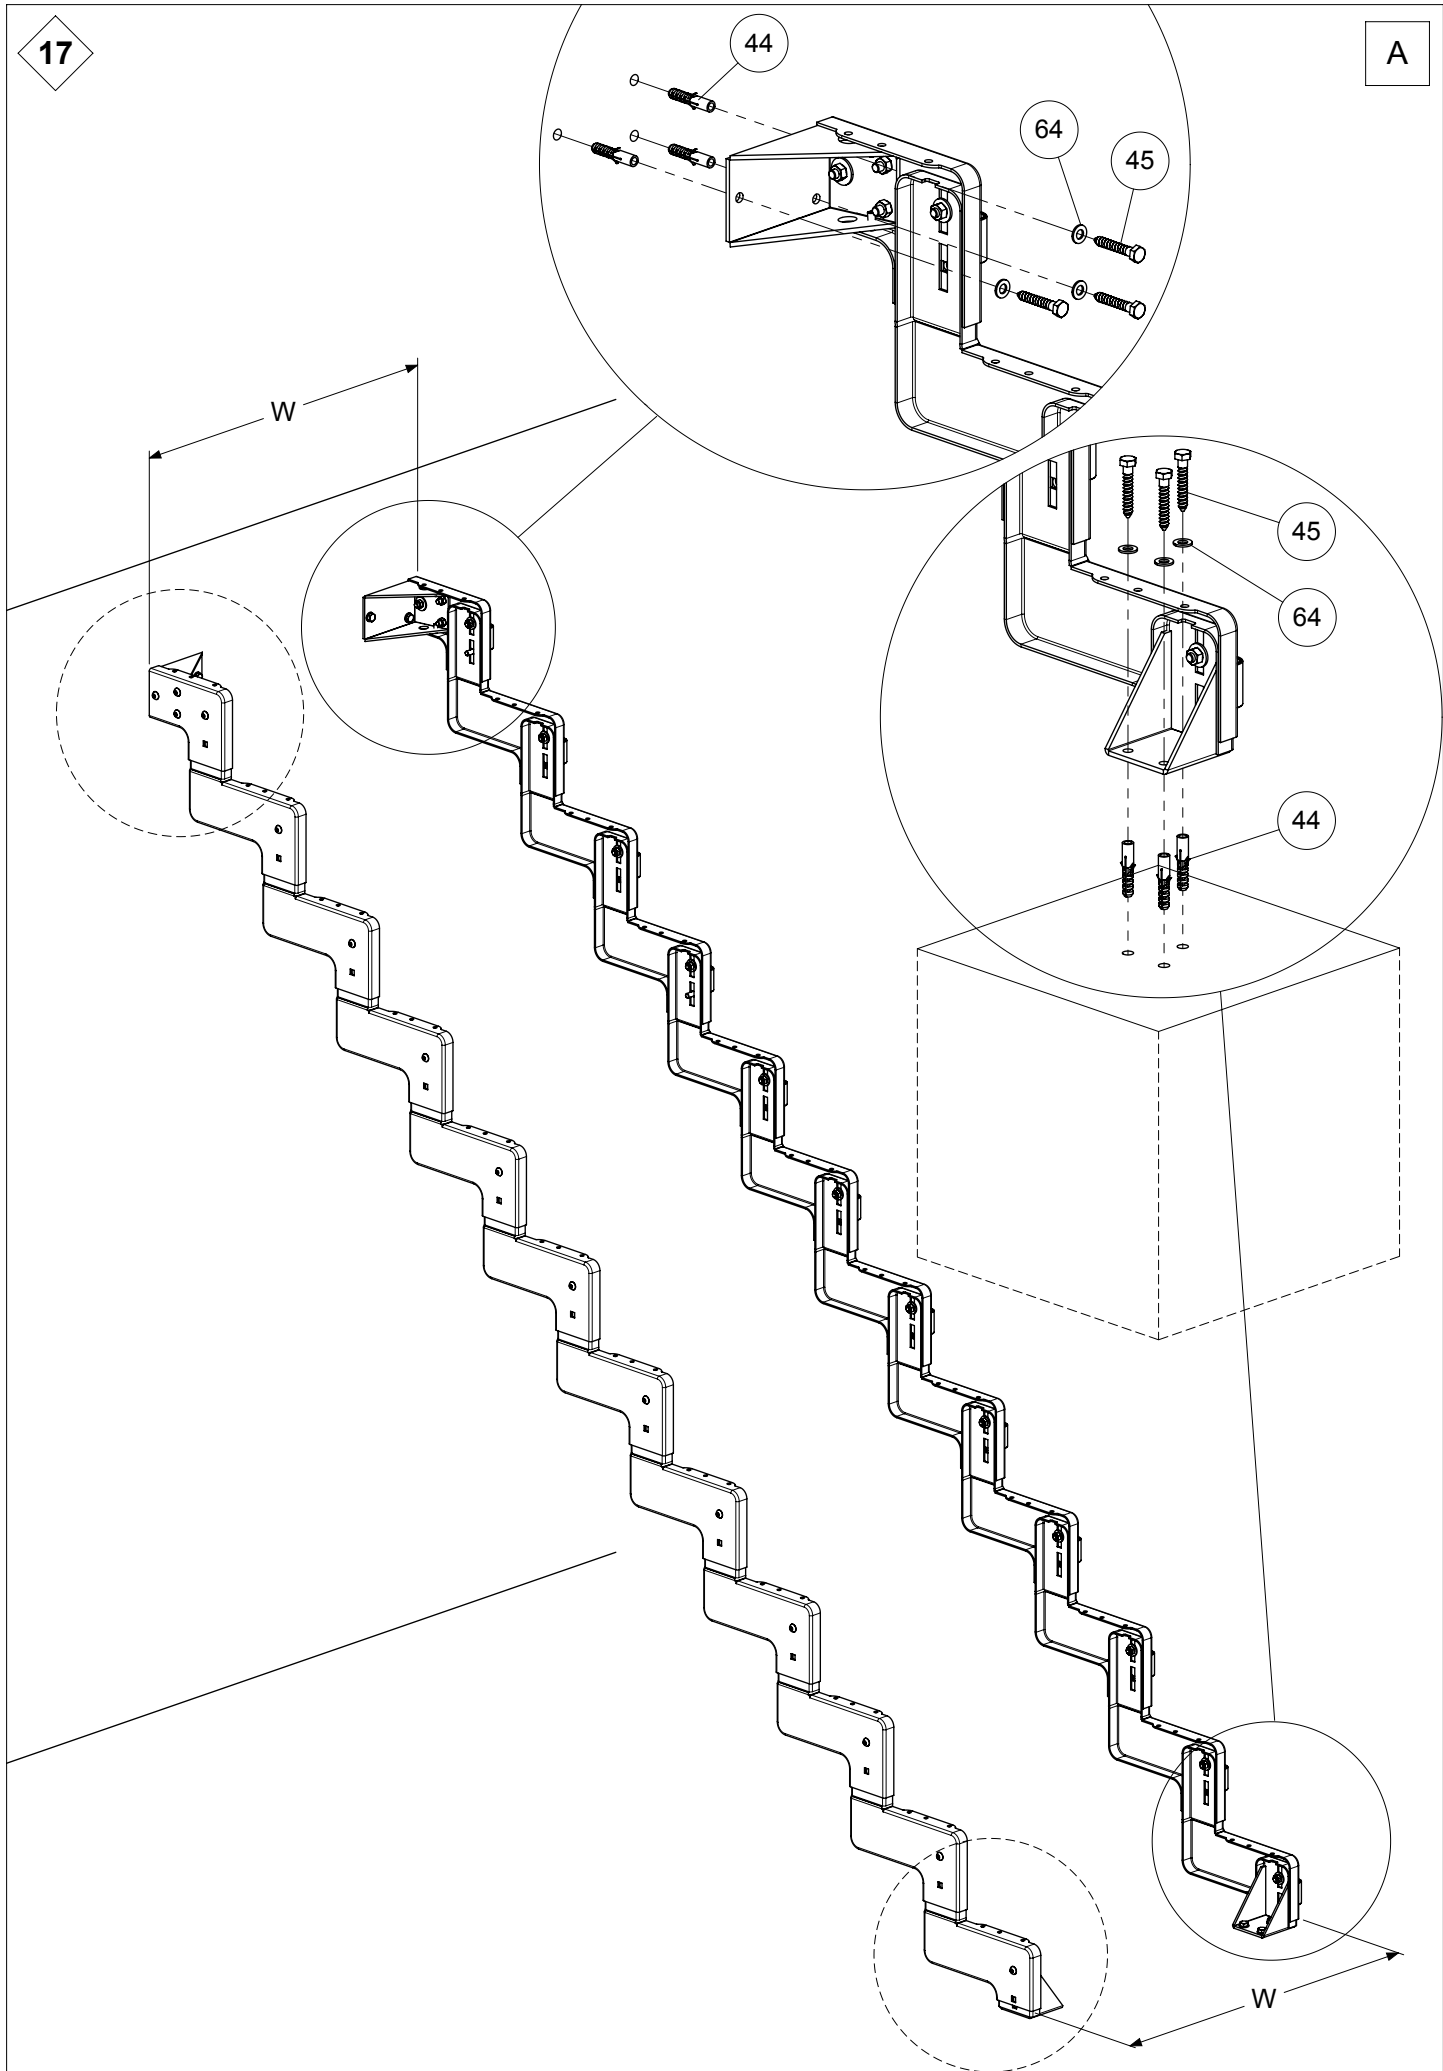


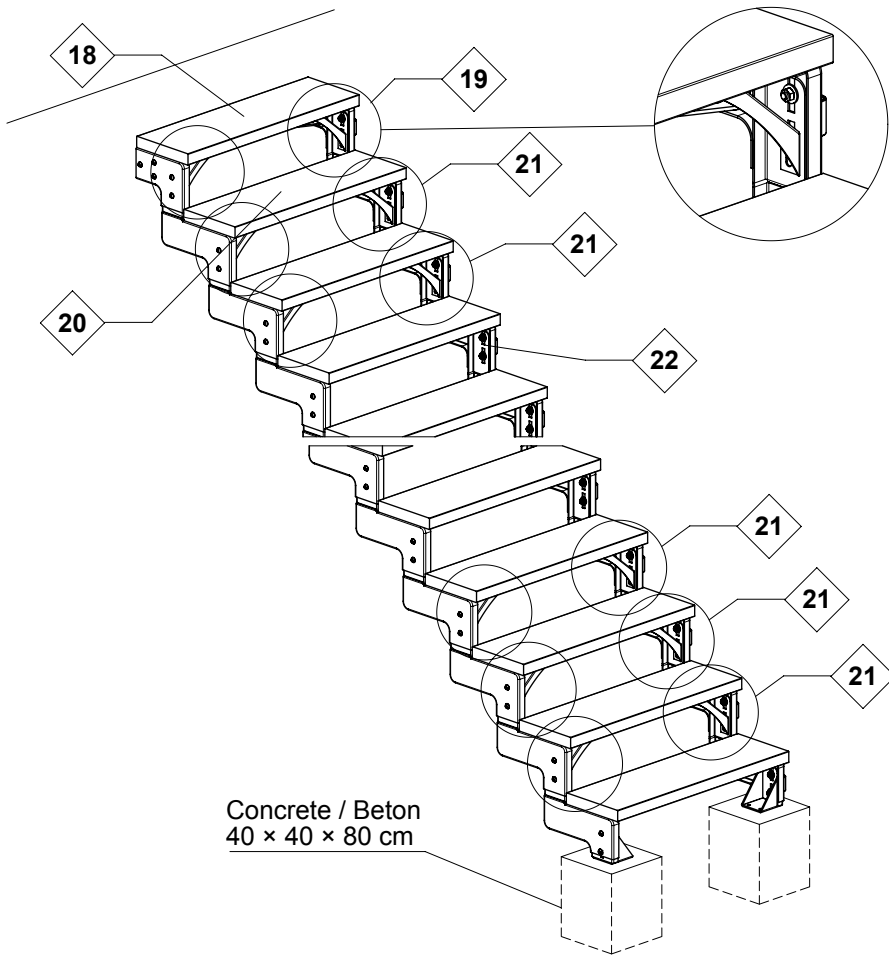

!


If more than 6 steps:
Add
9 + 10

Wenn mehr als 6 Stufen:
hinzufügen
9 + 10

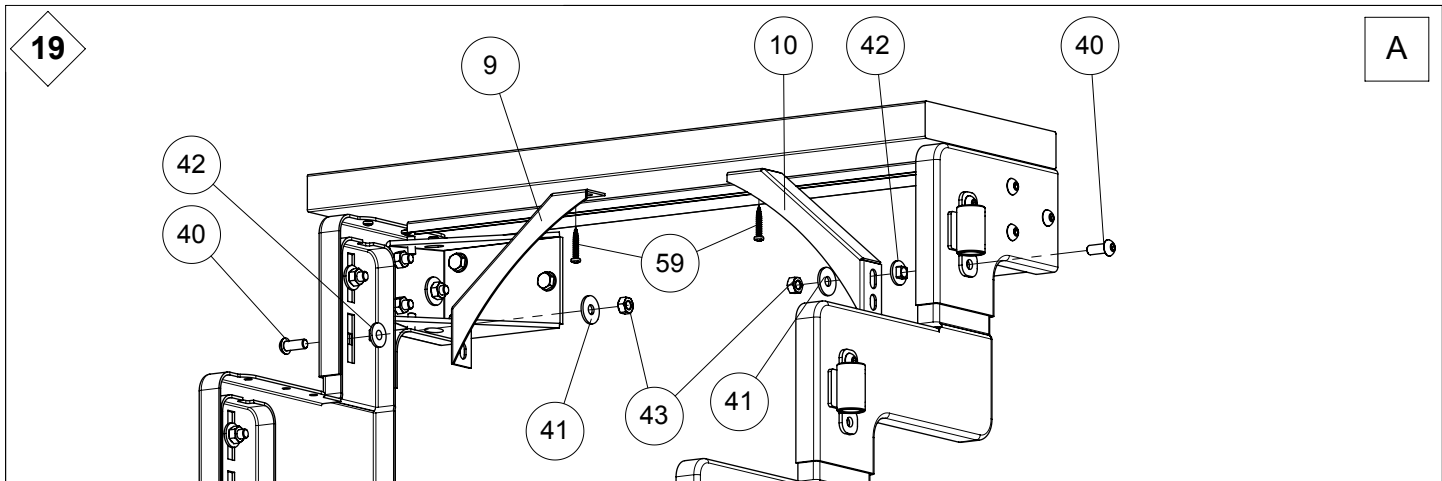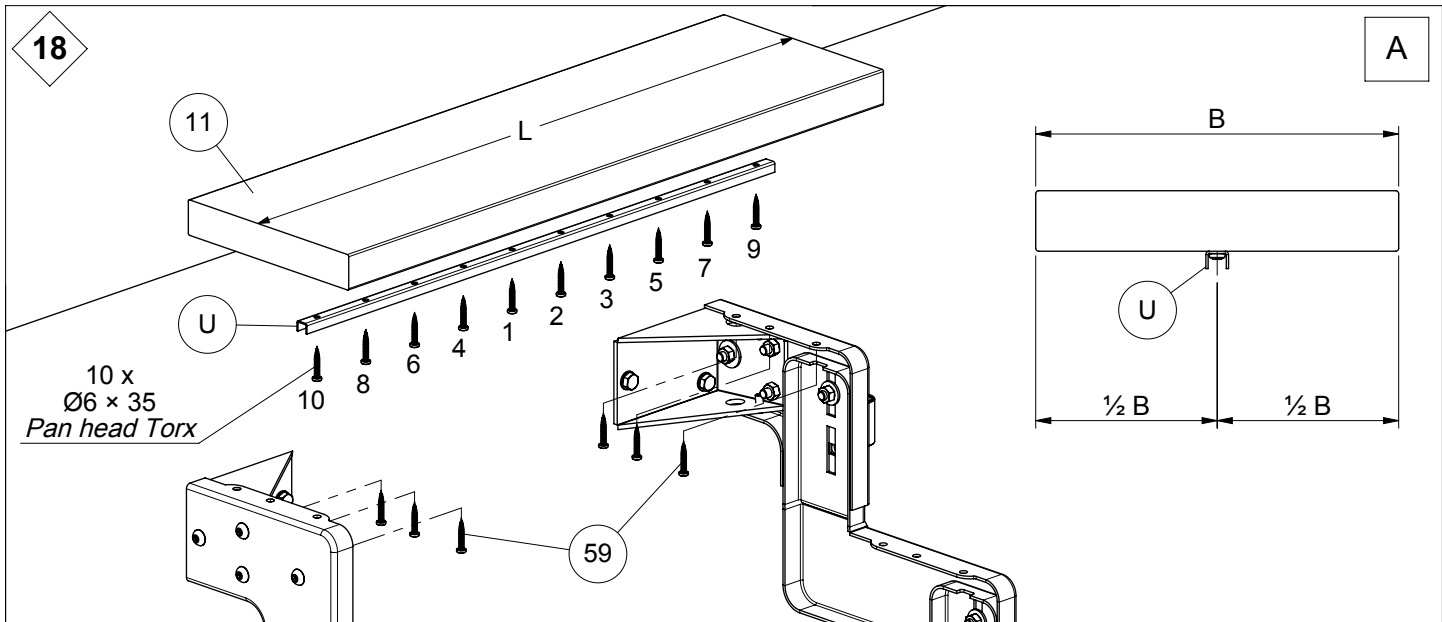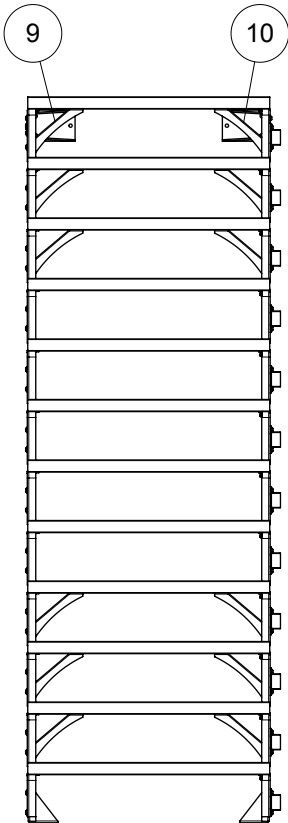


20

A

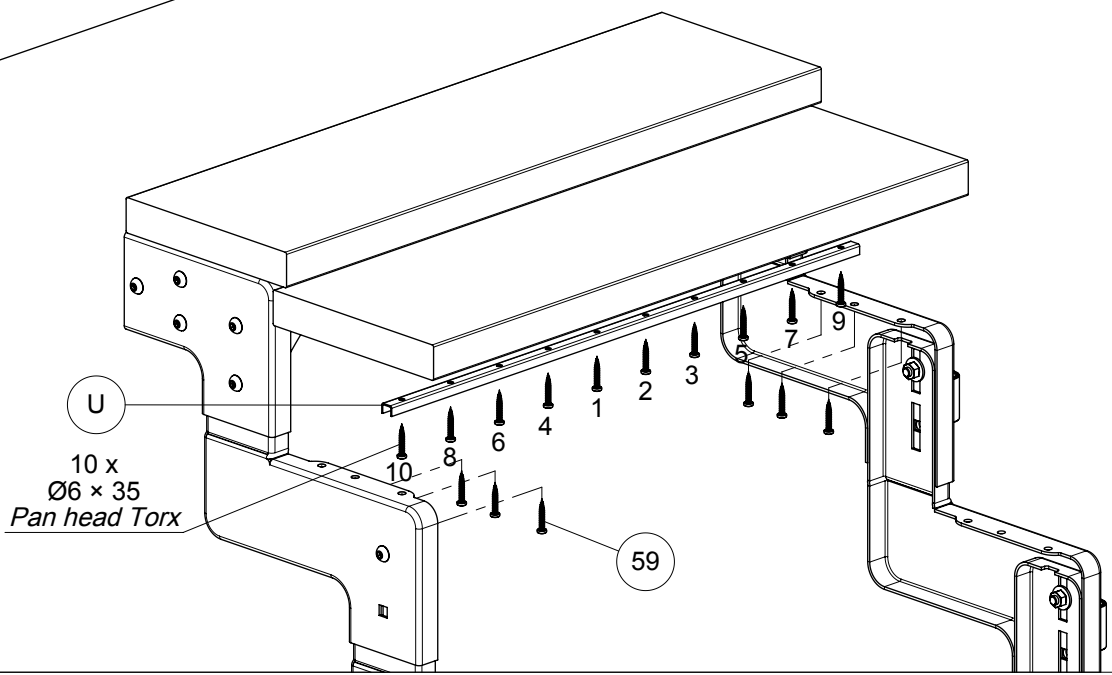


21




A




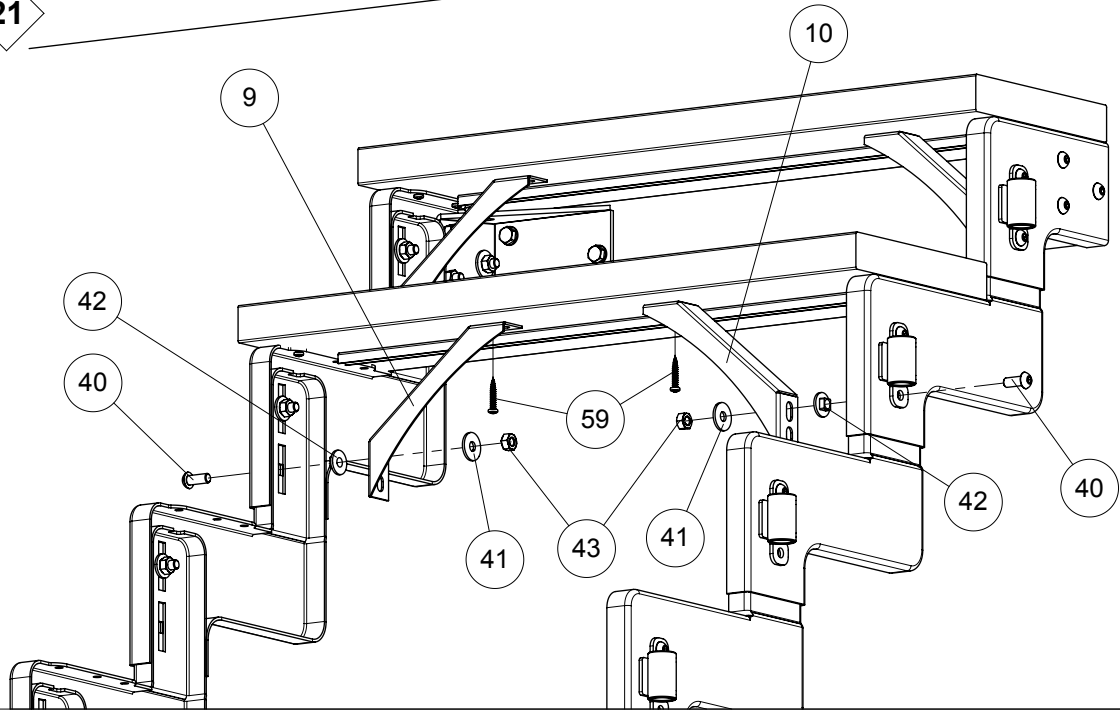






22



A

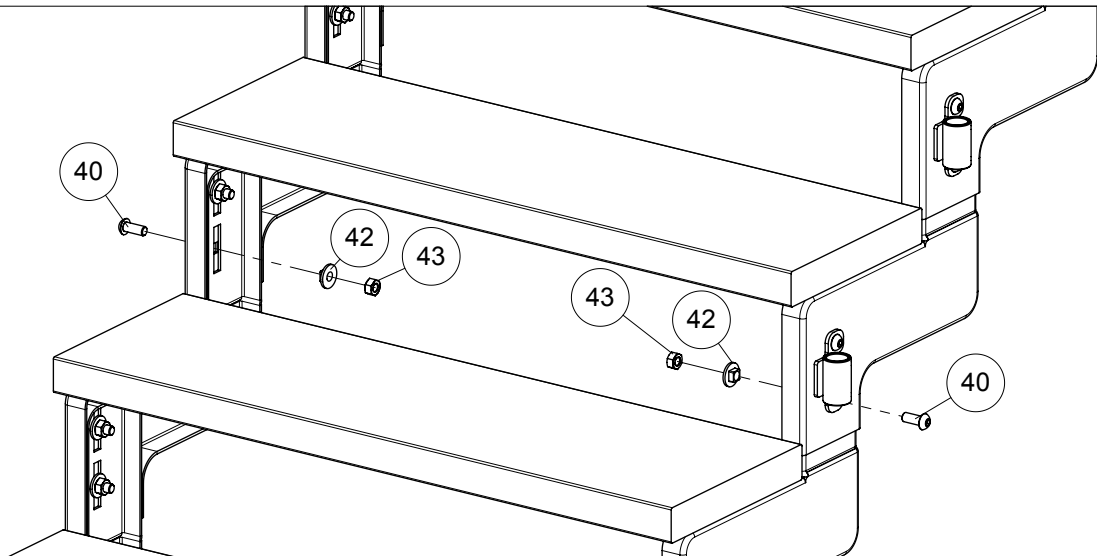

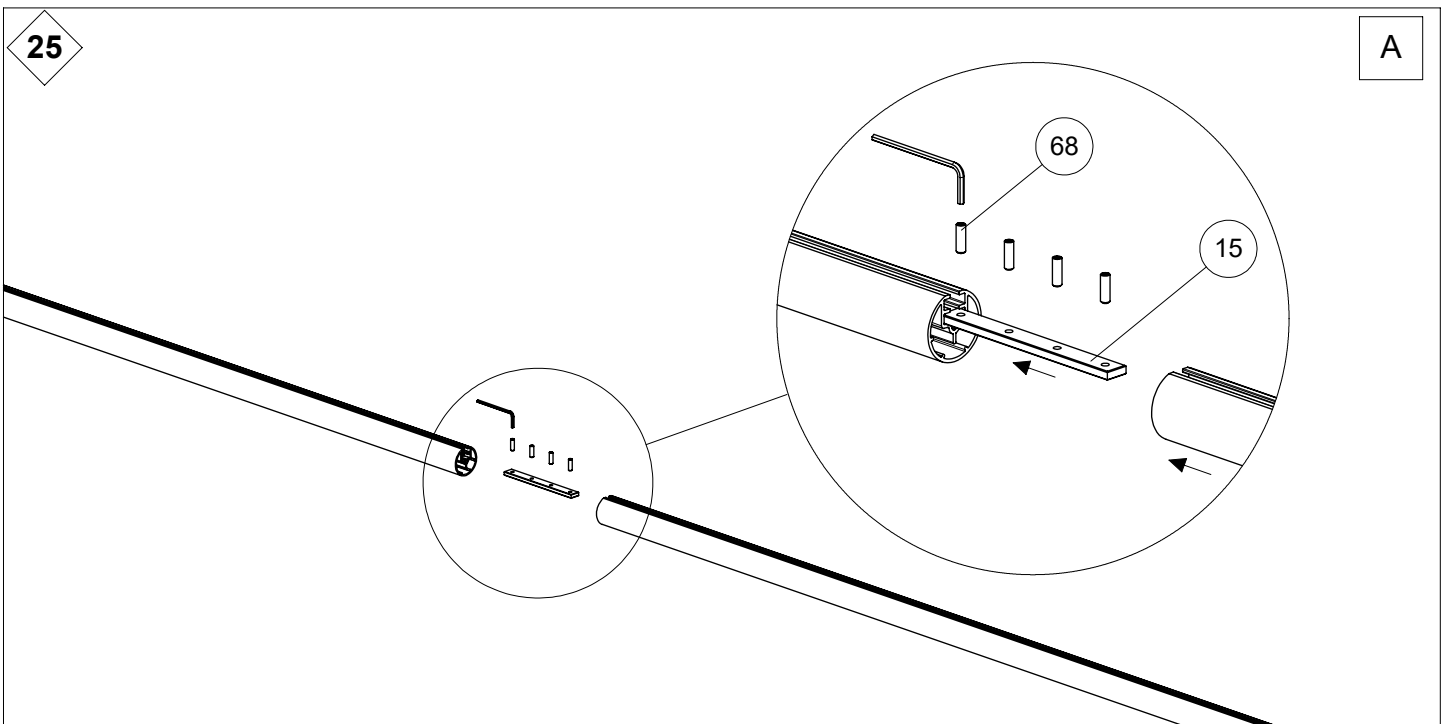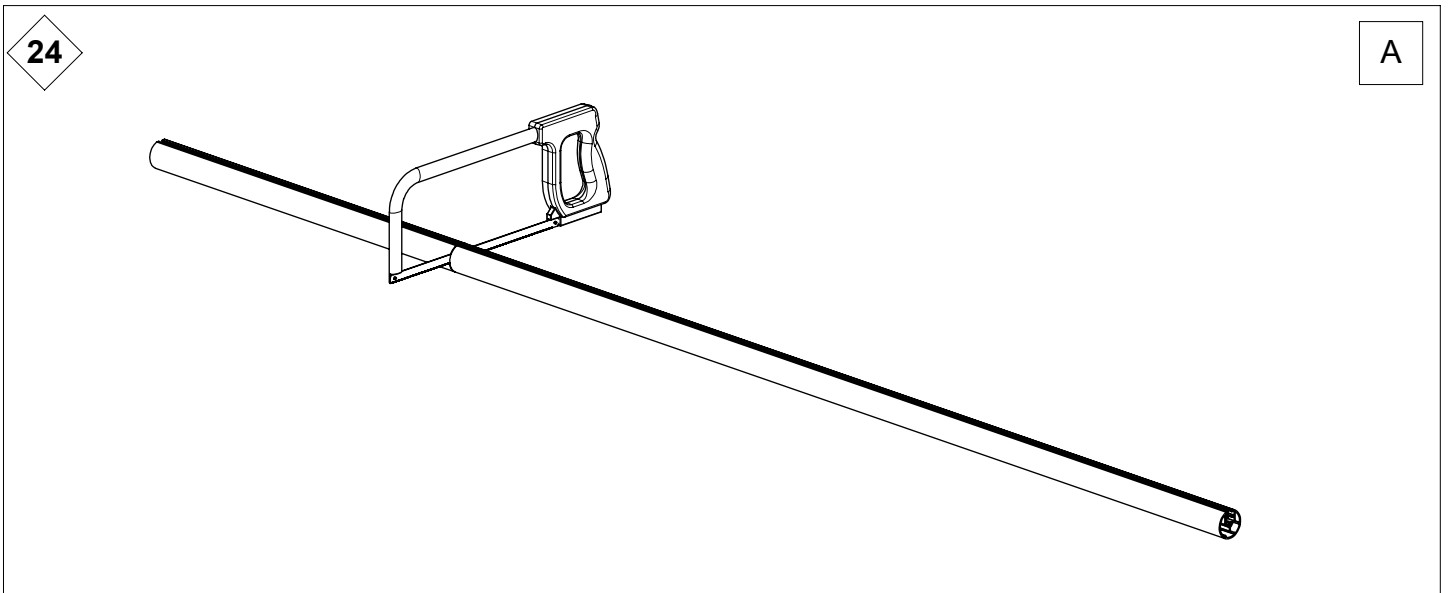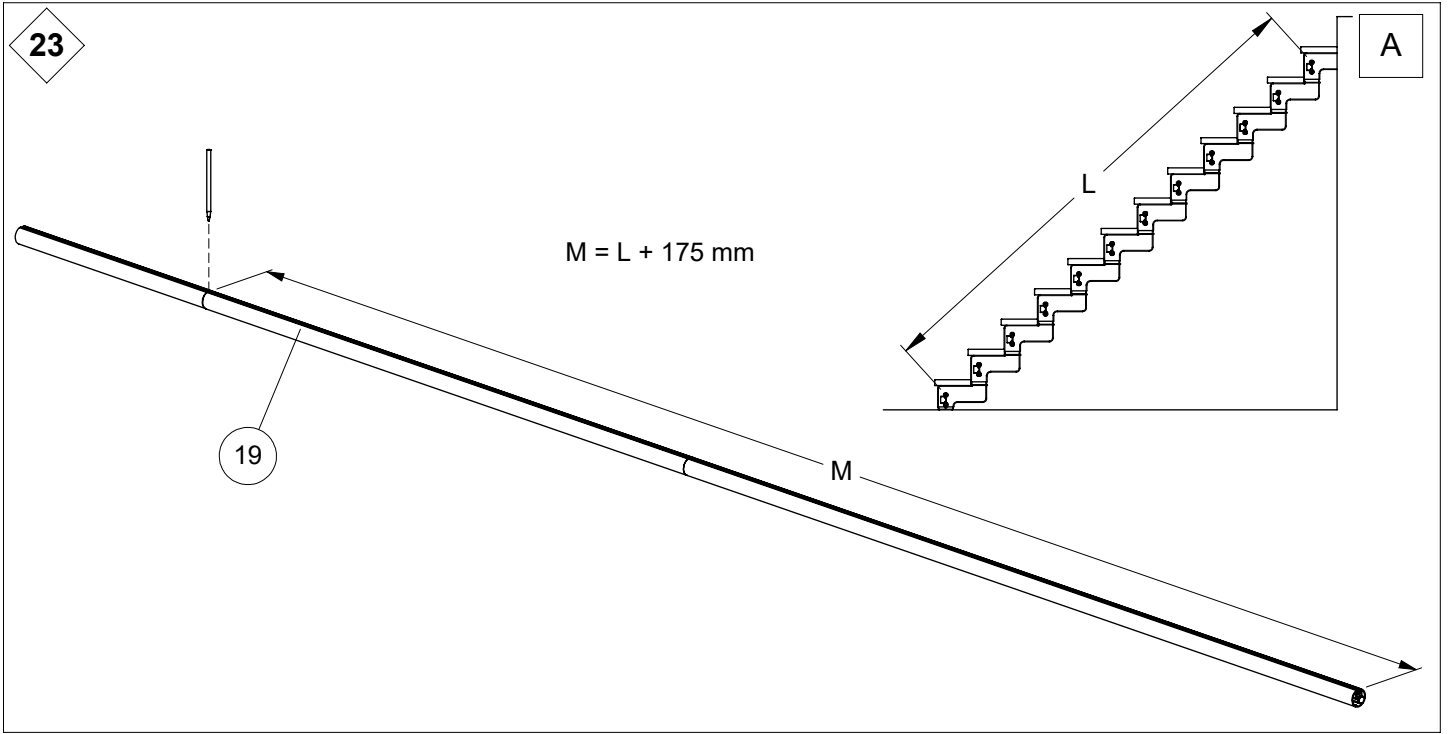

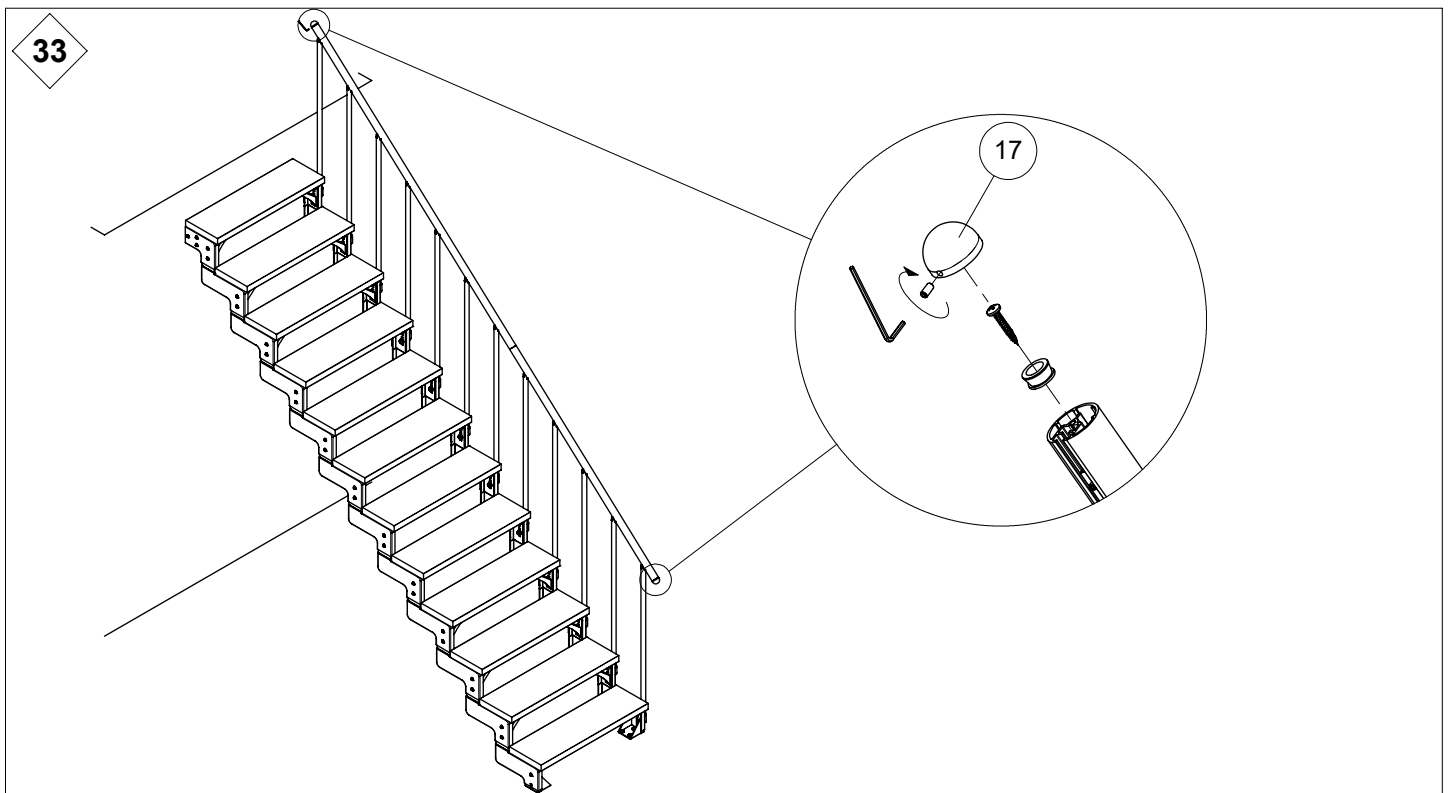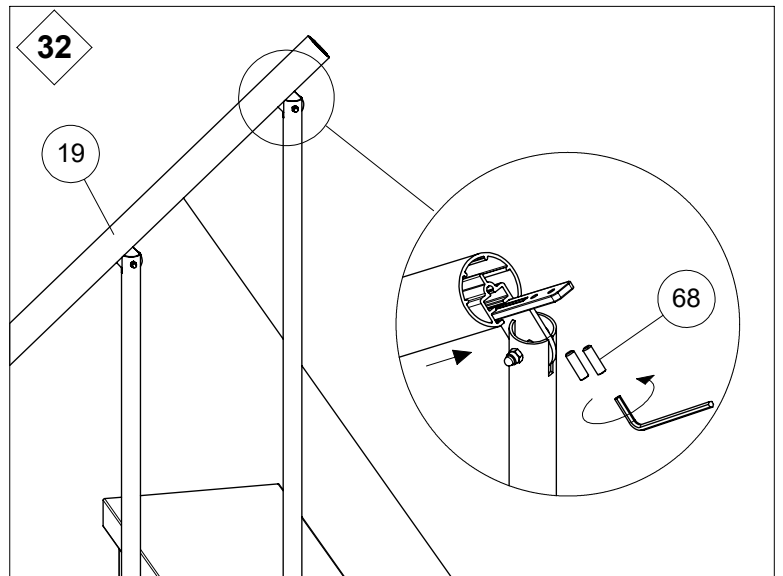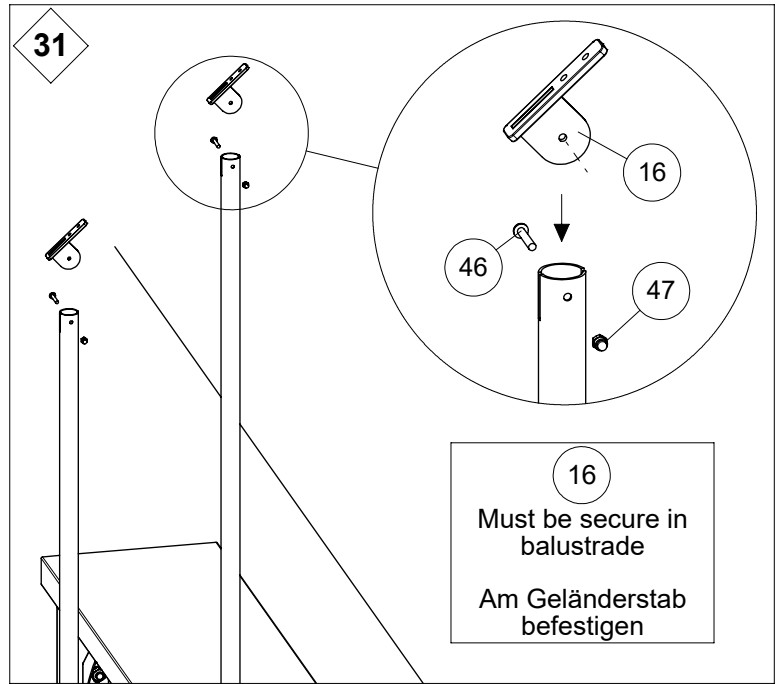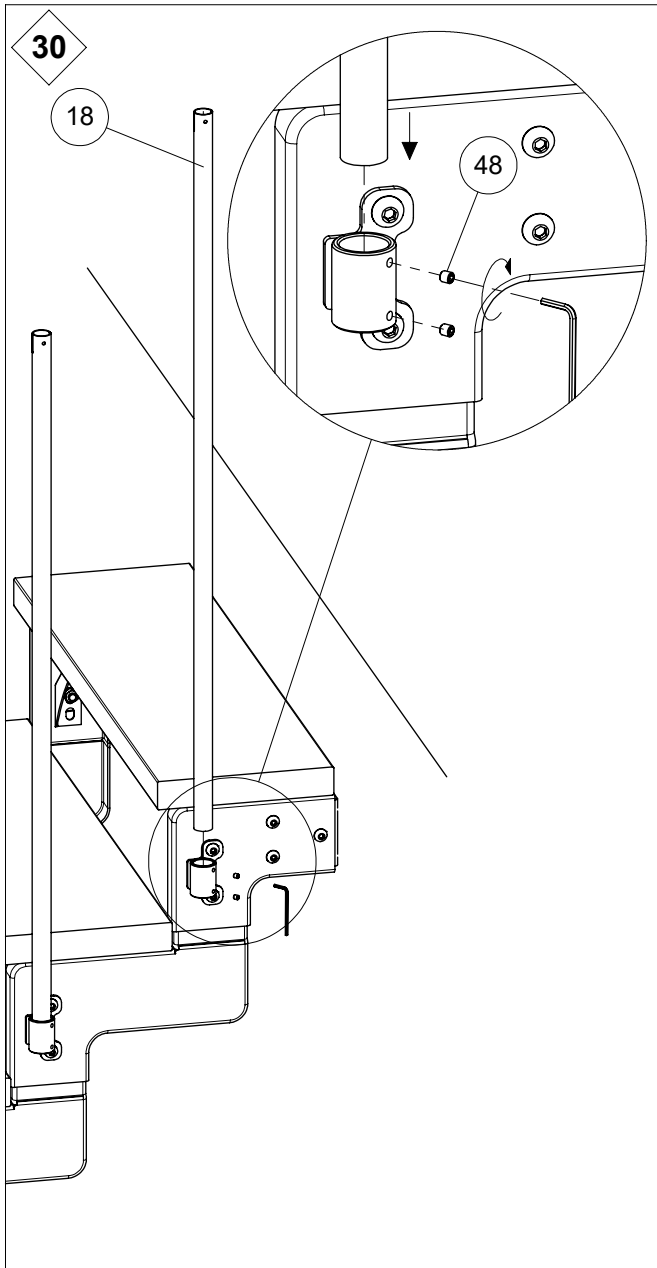

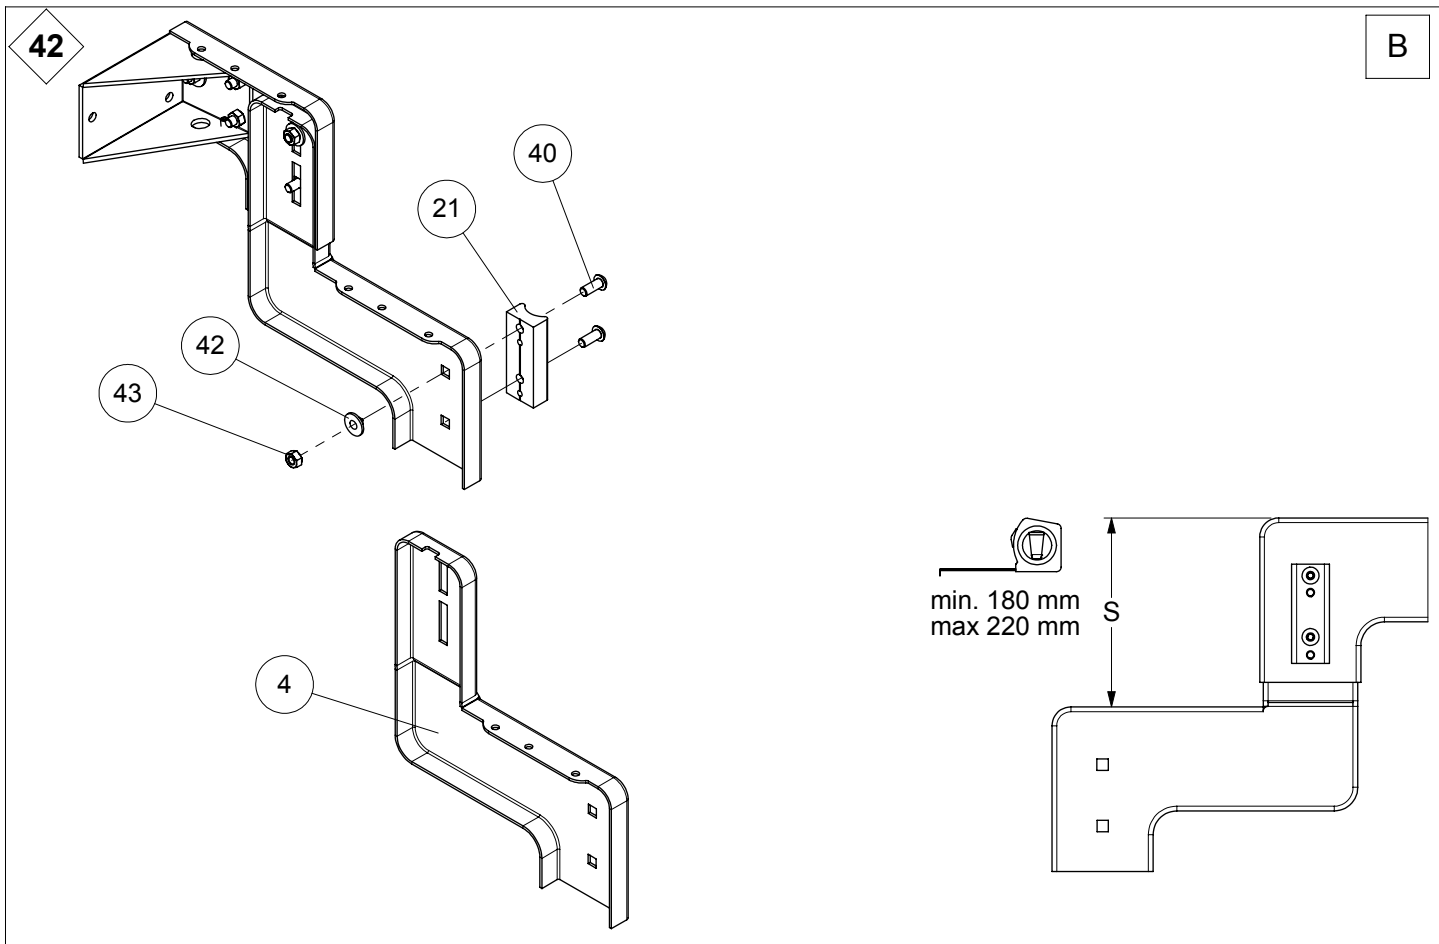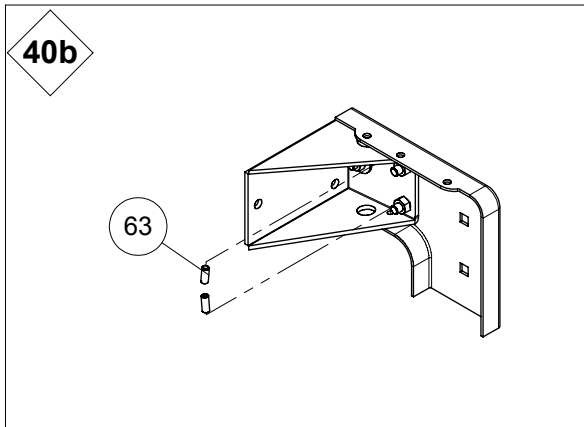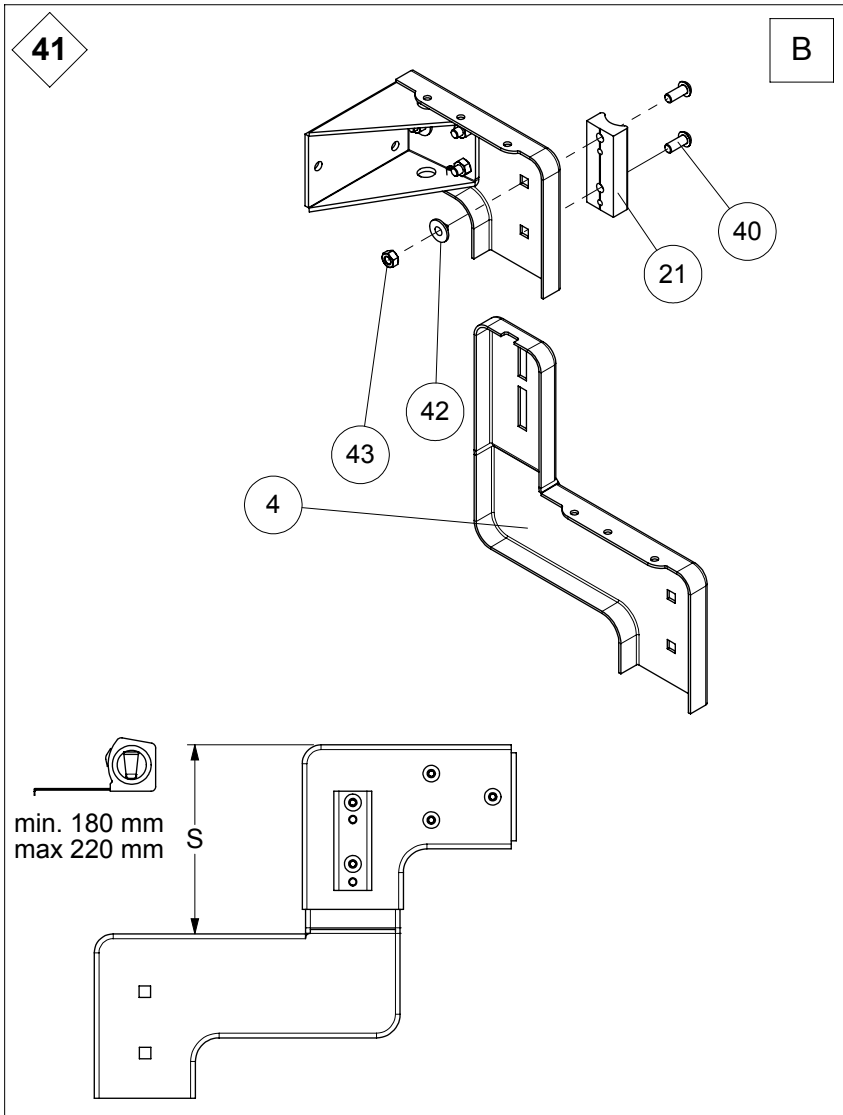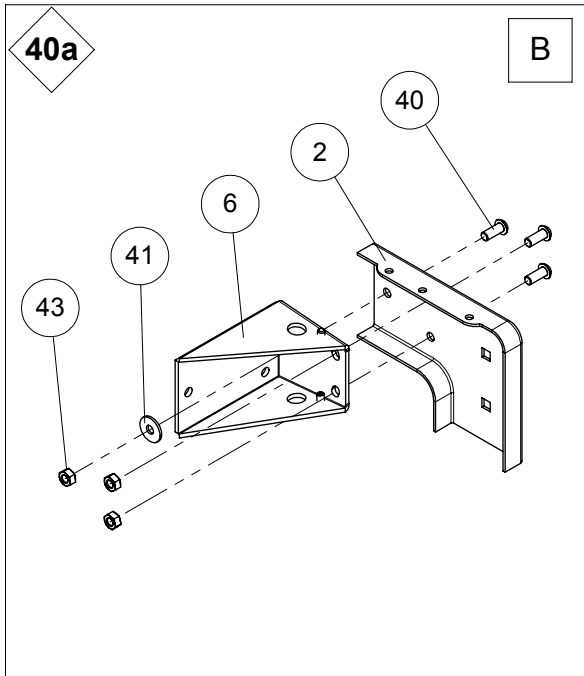


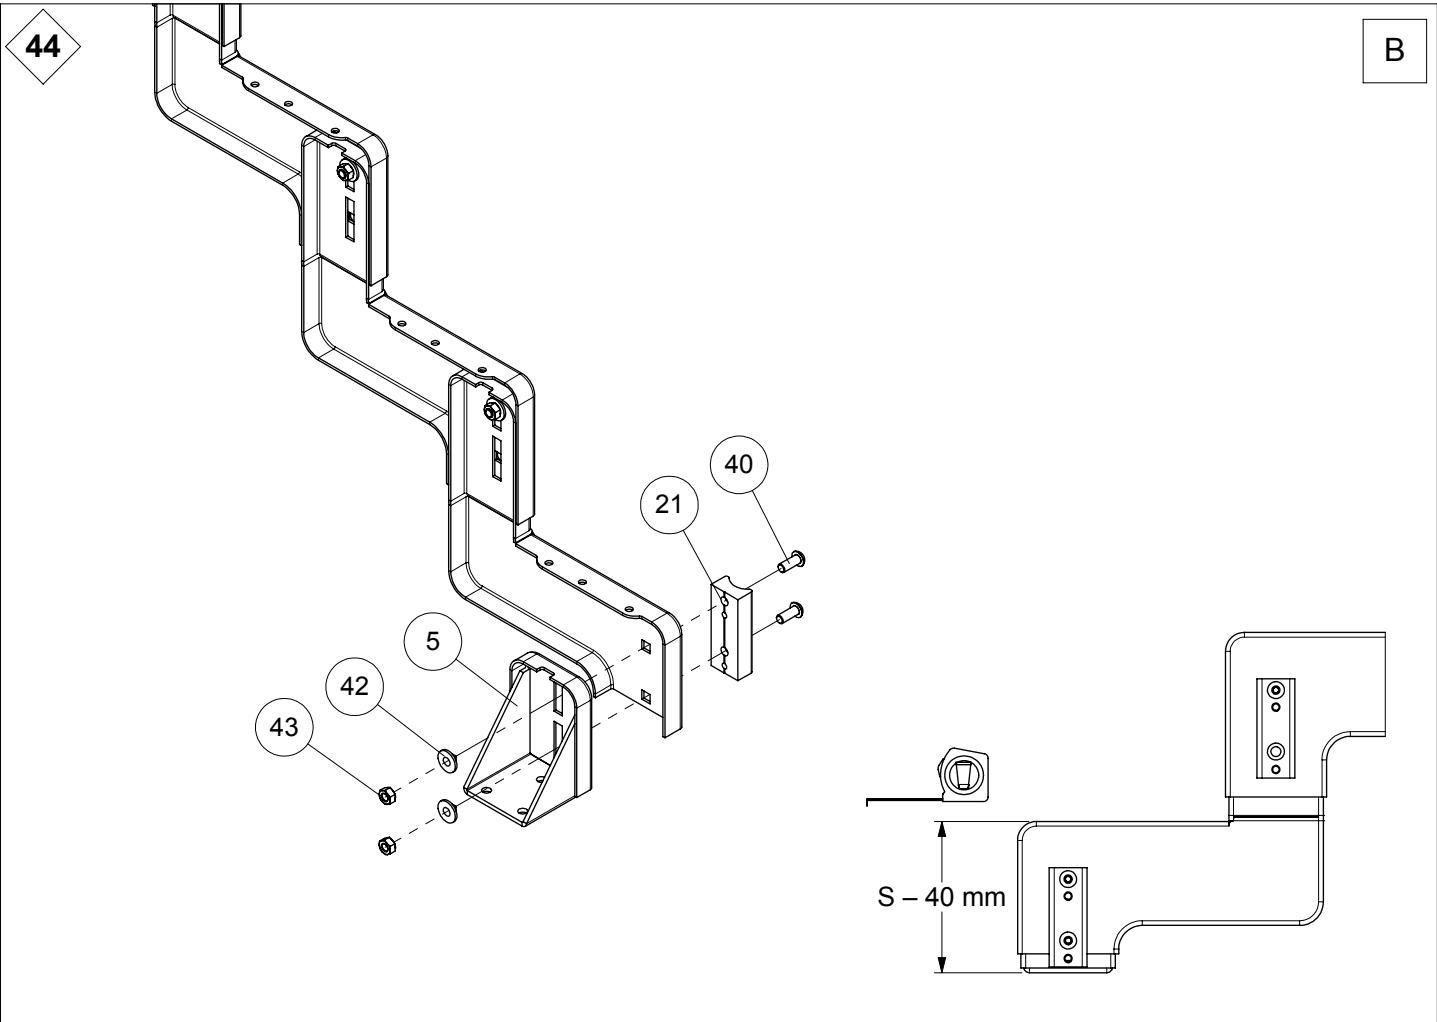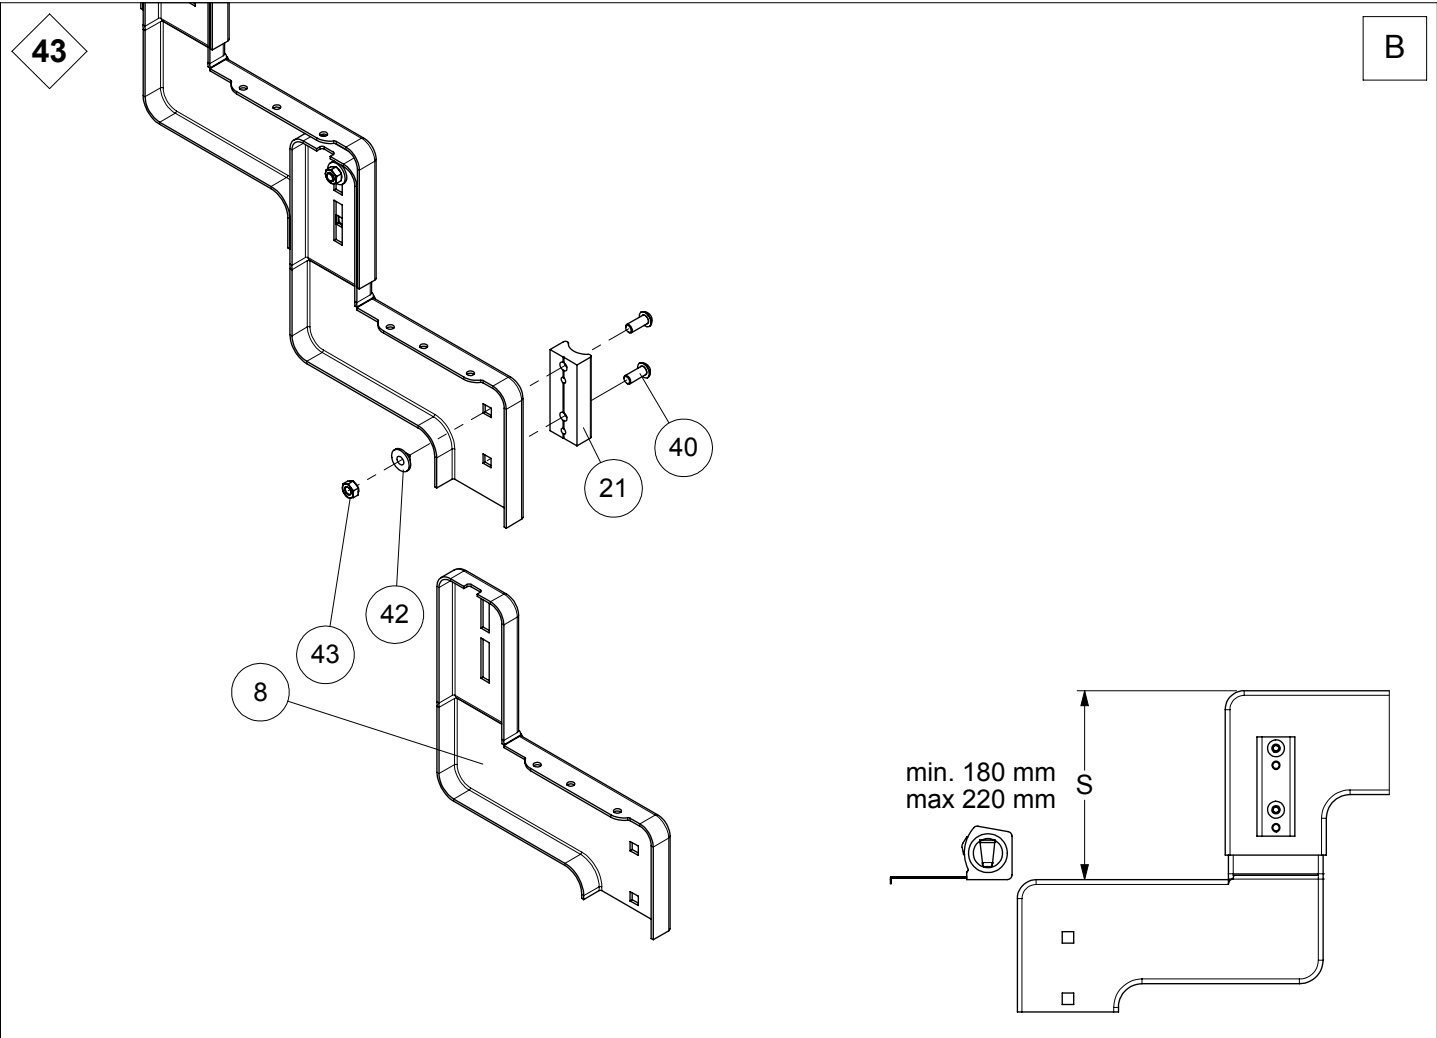

45


B

Stufe / Step	W
80 cm	803 mm
100 cm	1003 mm

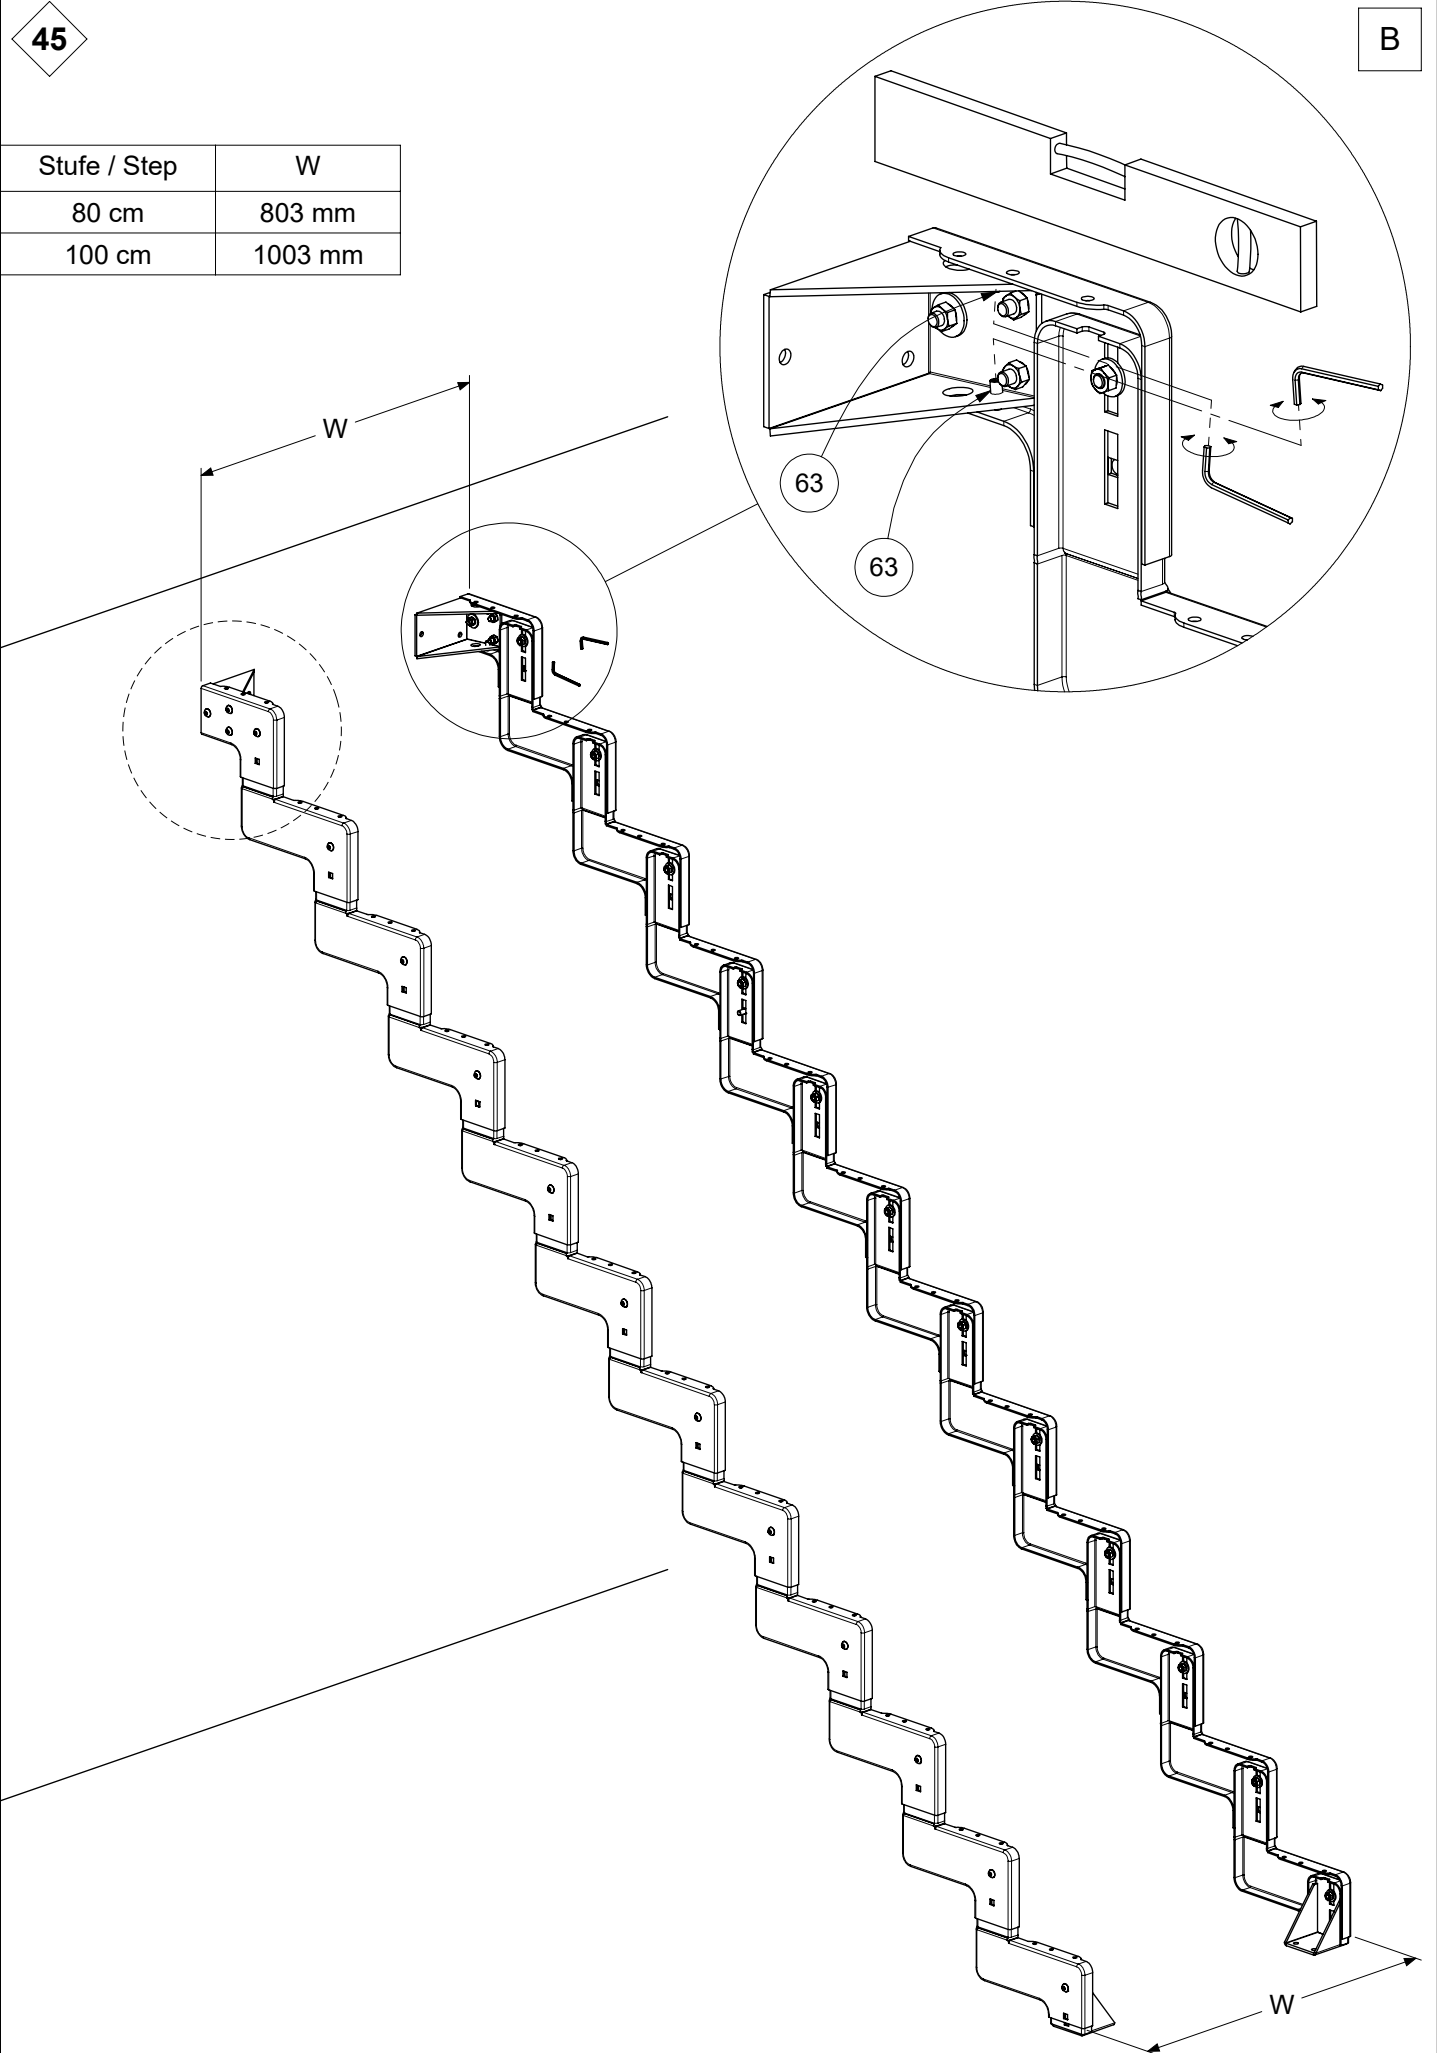


46


B

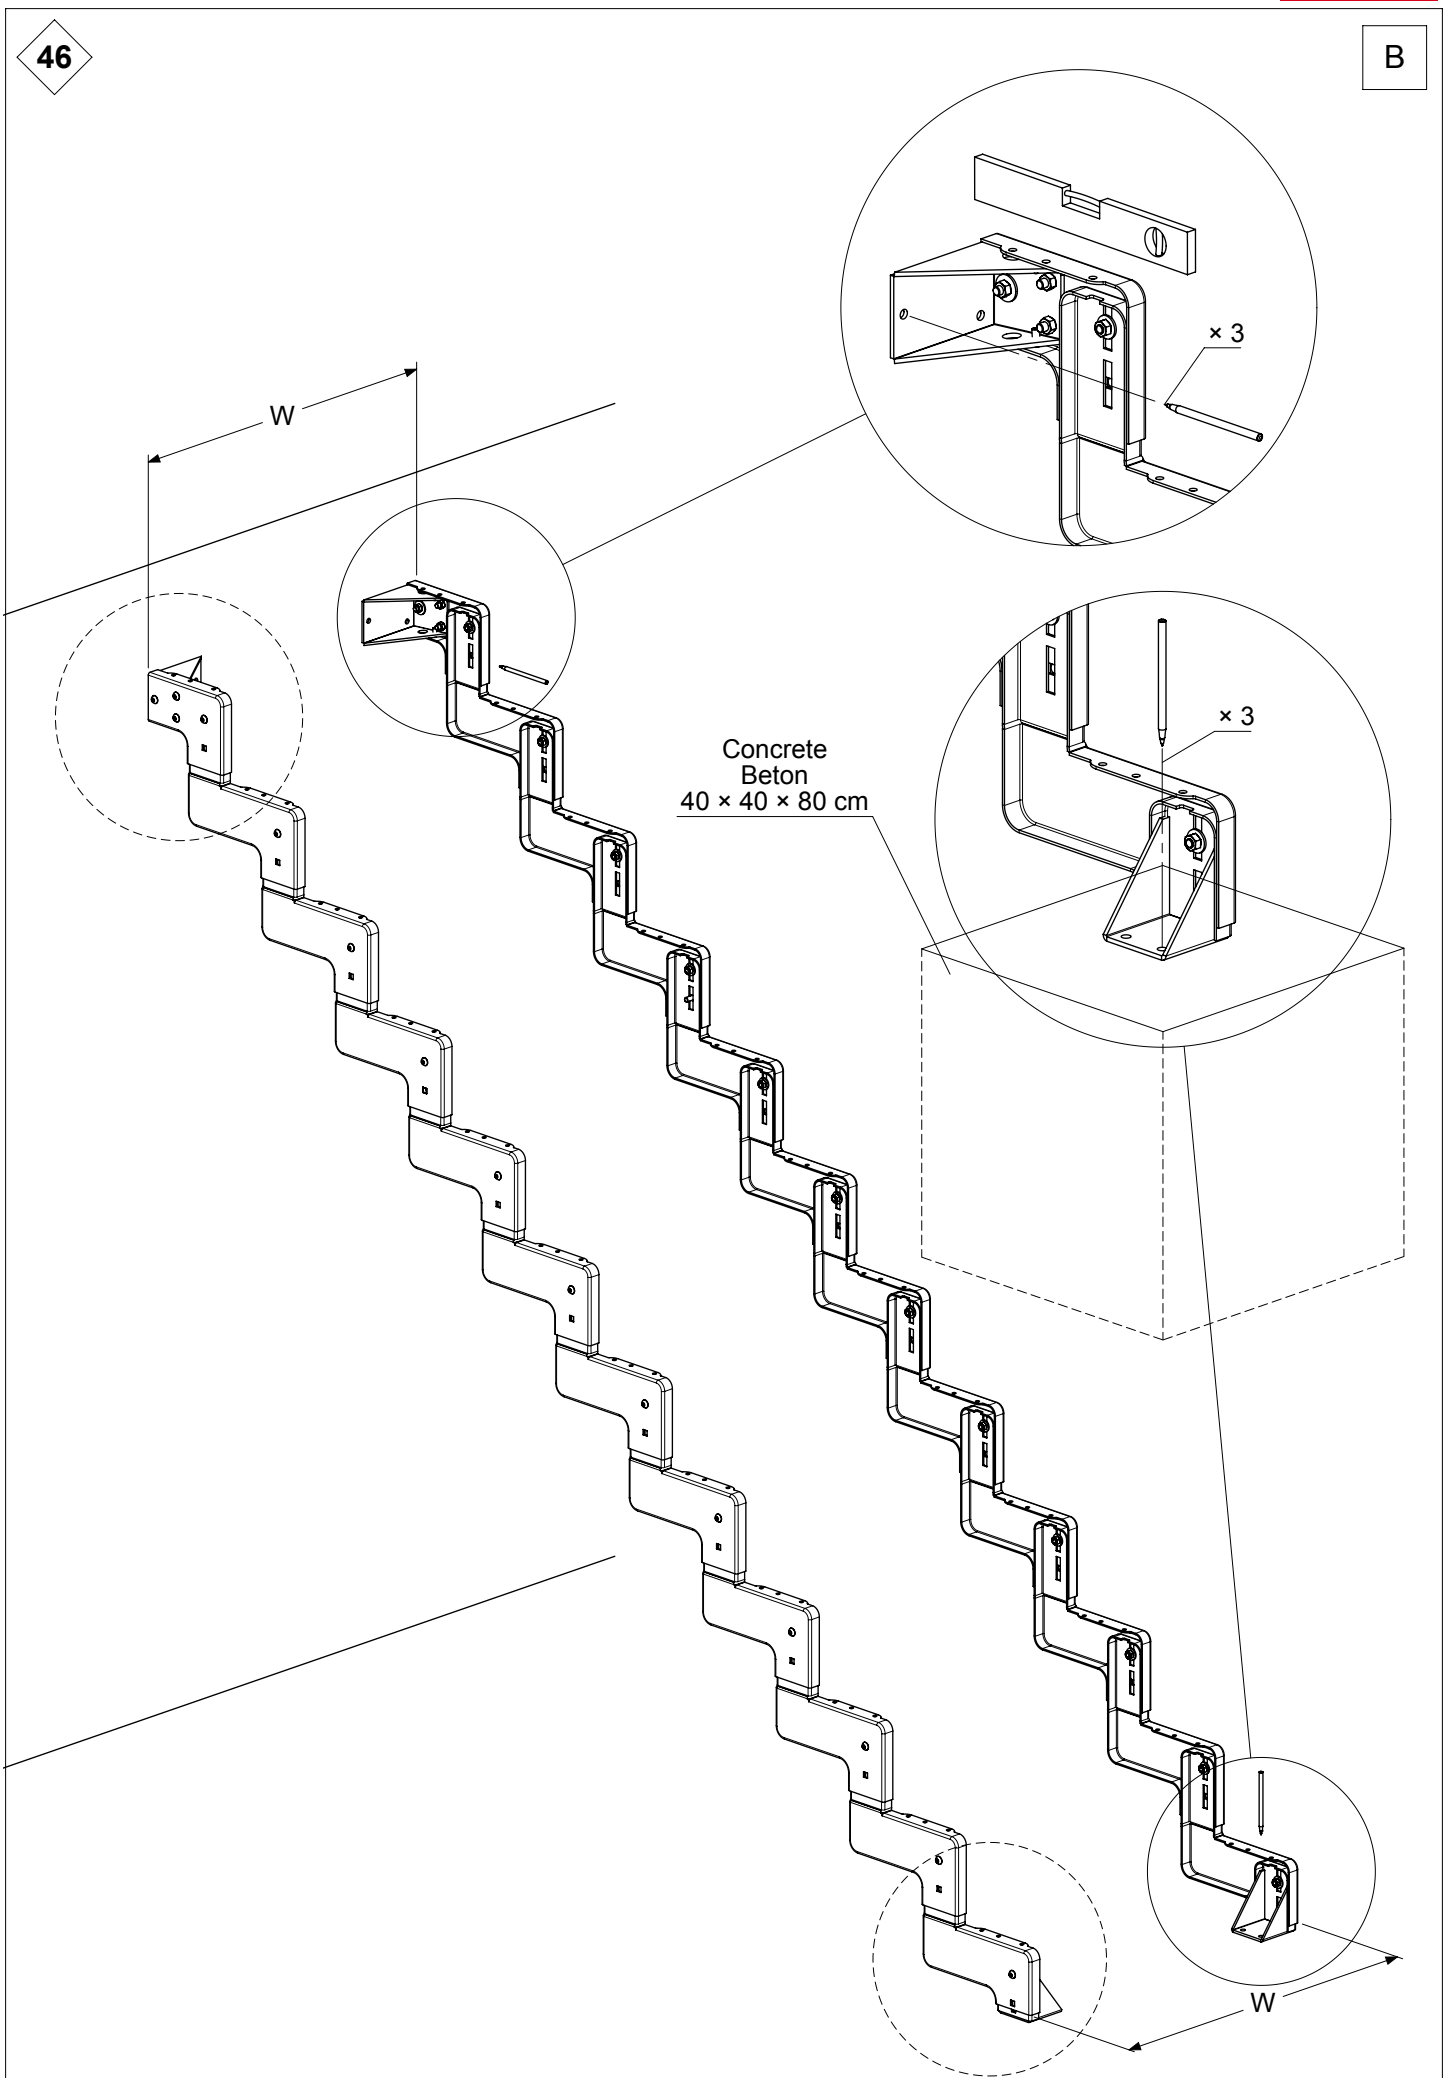


47

B



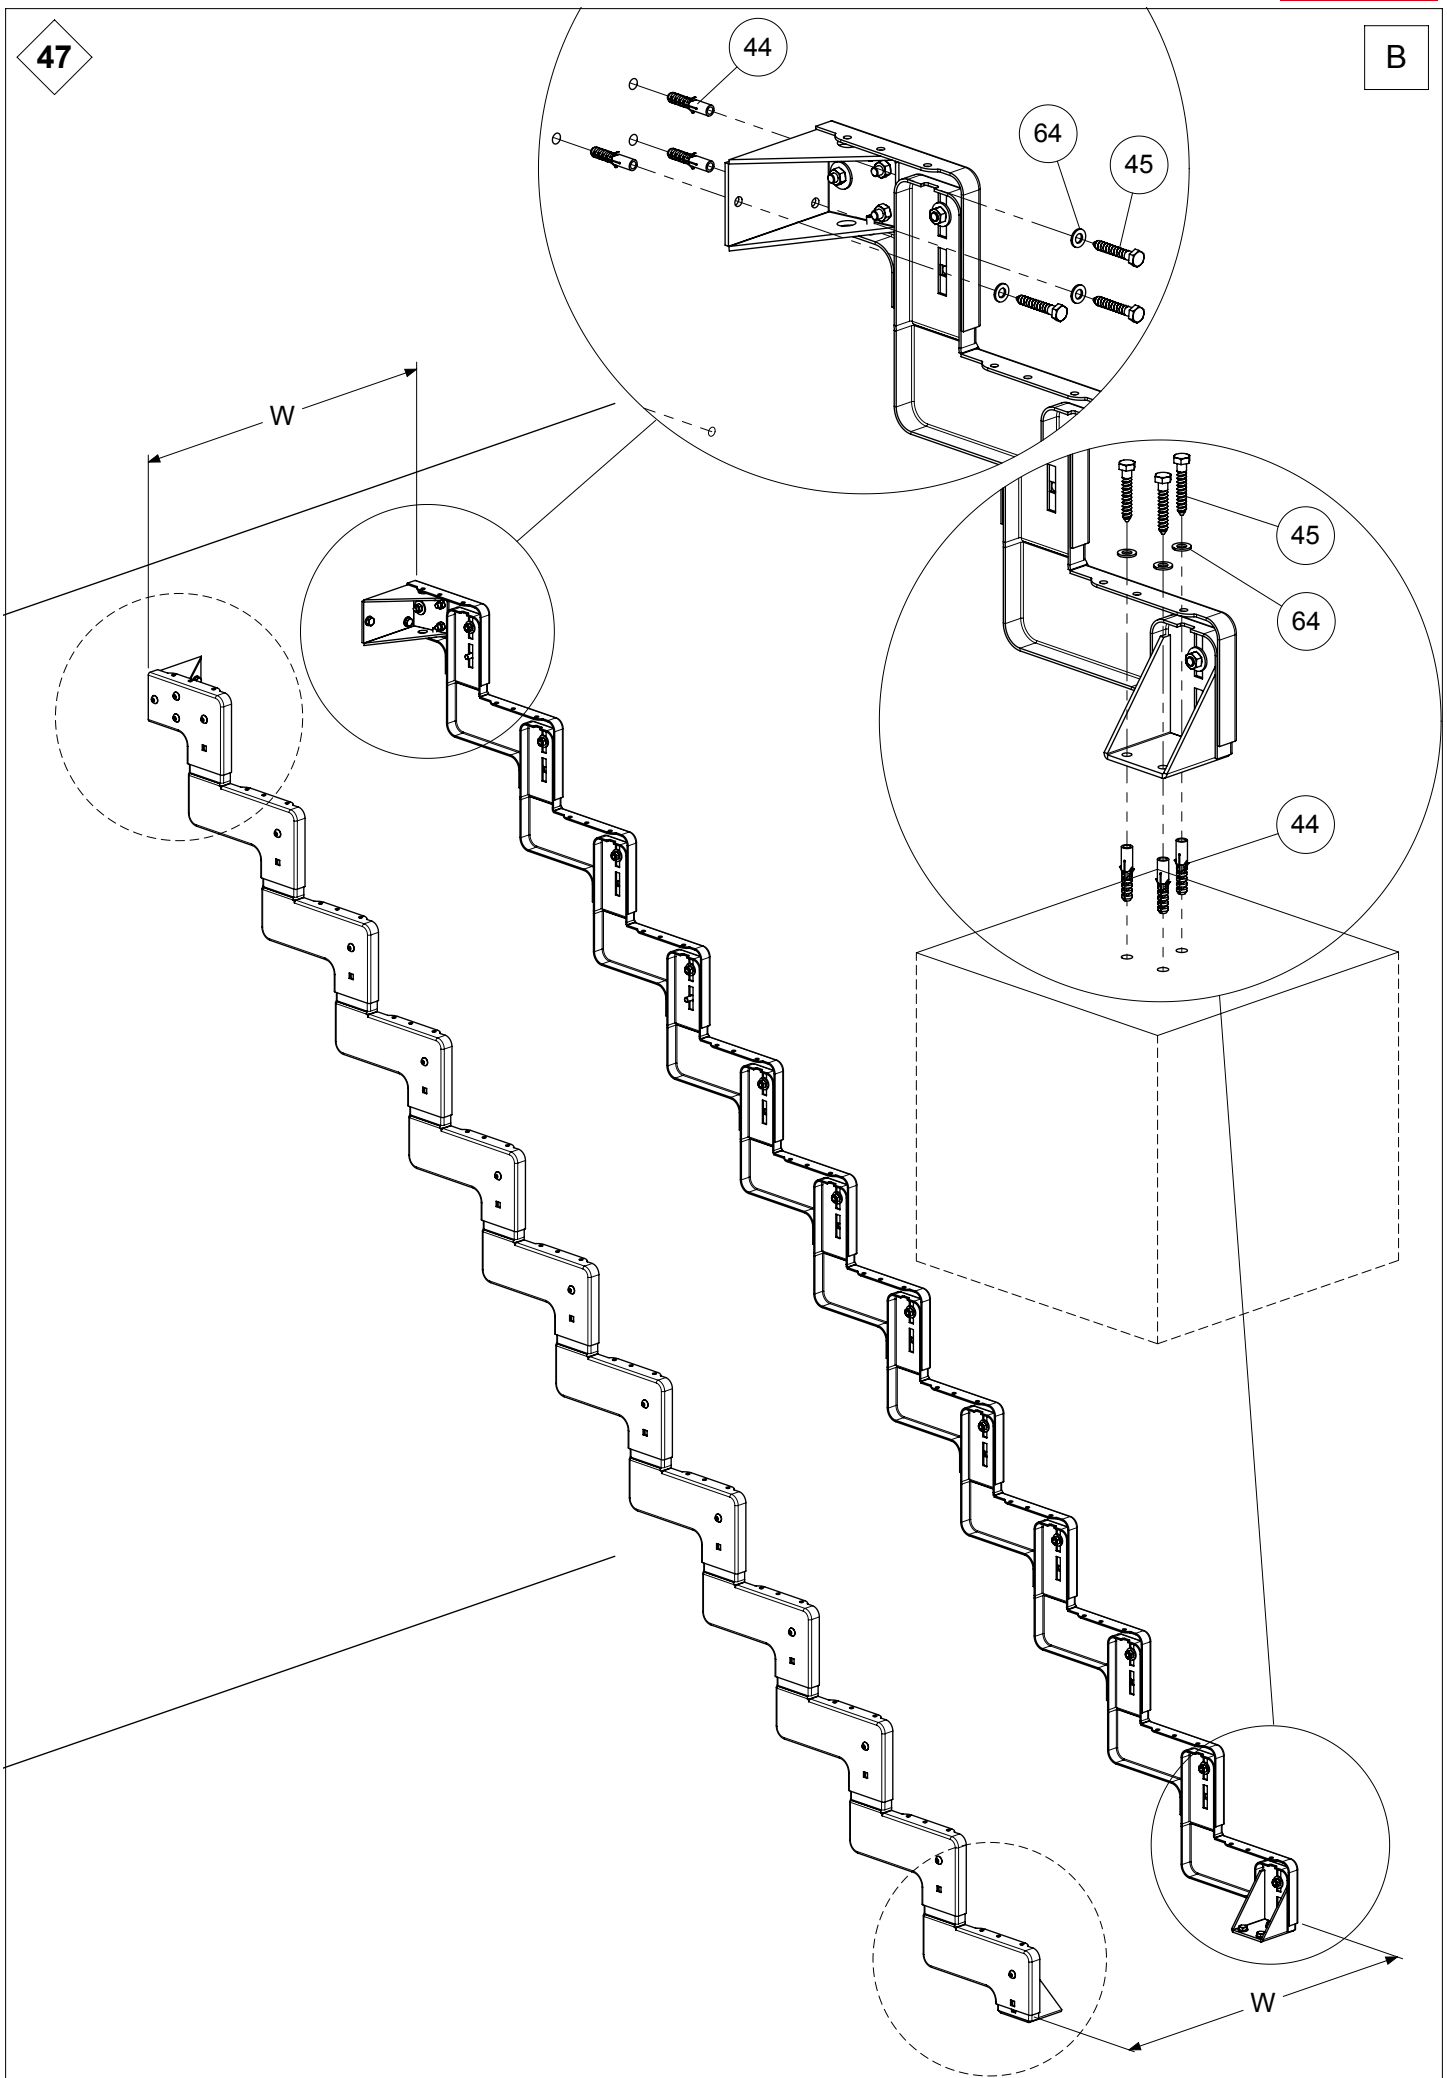


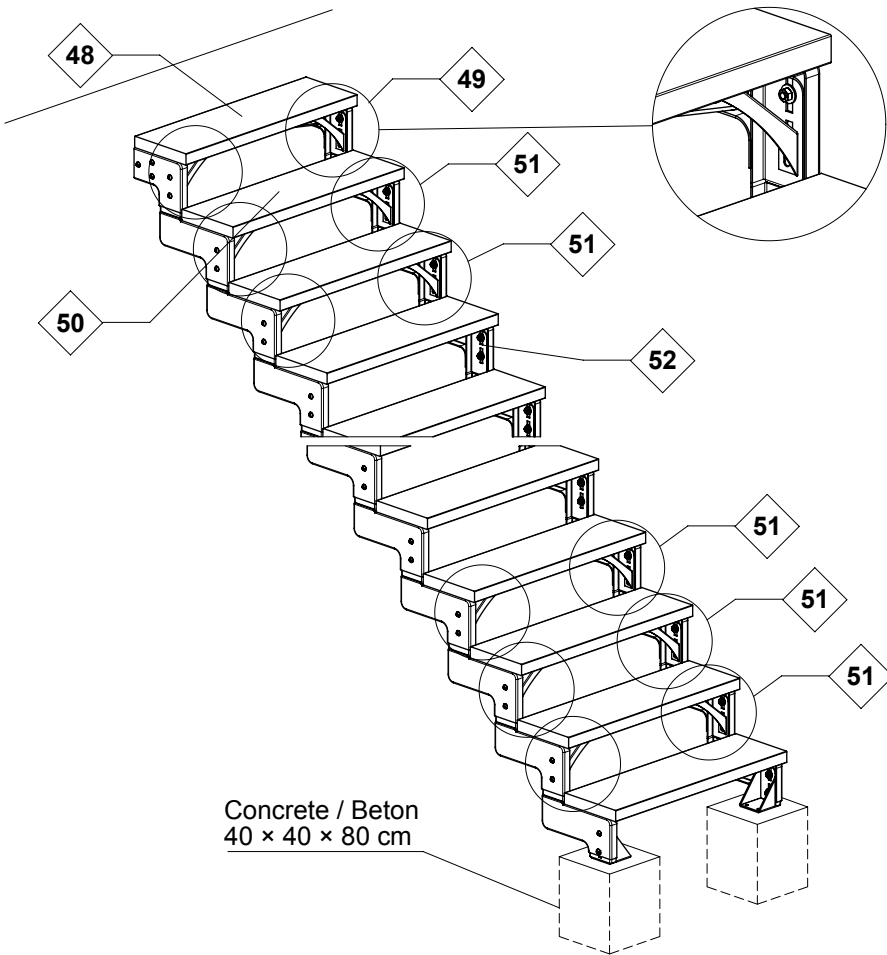




If more than
6 steps:
Add
9 + 10

Wenn mehr als
6 Stufen:
9 + 10
hinzufügen

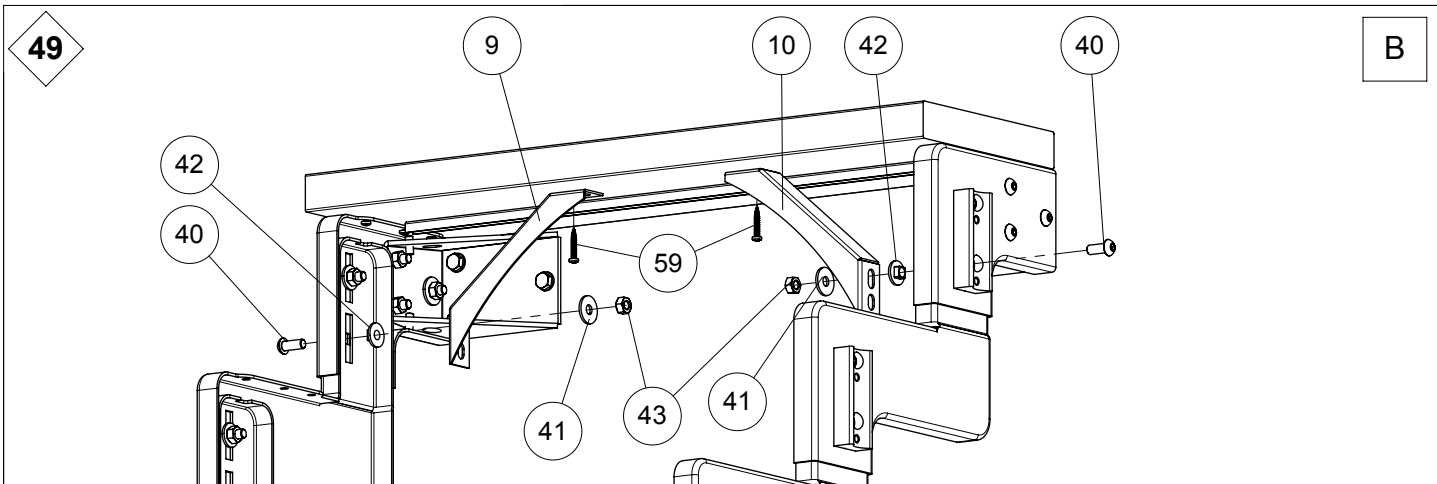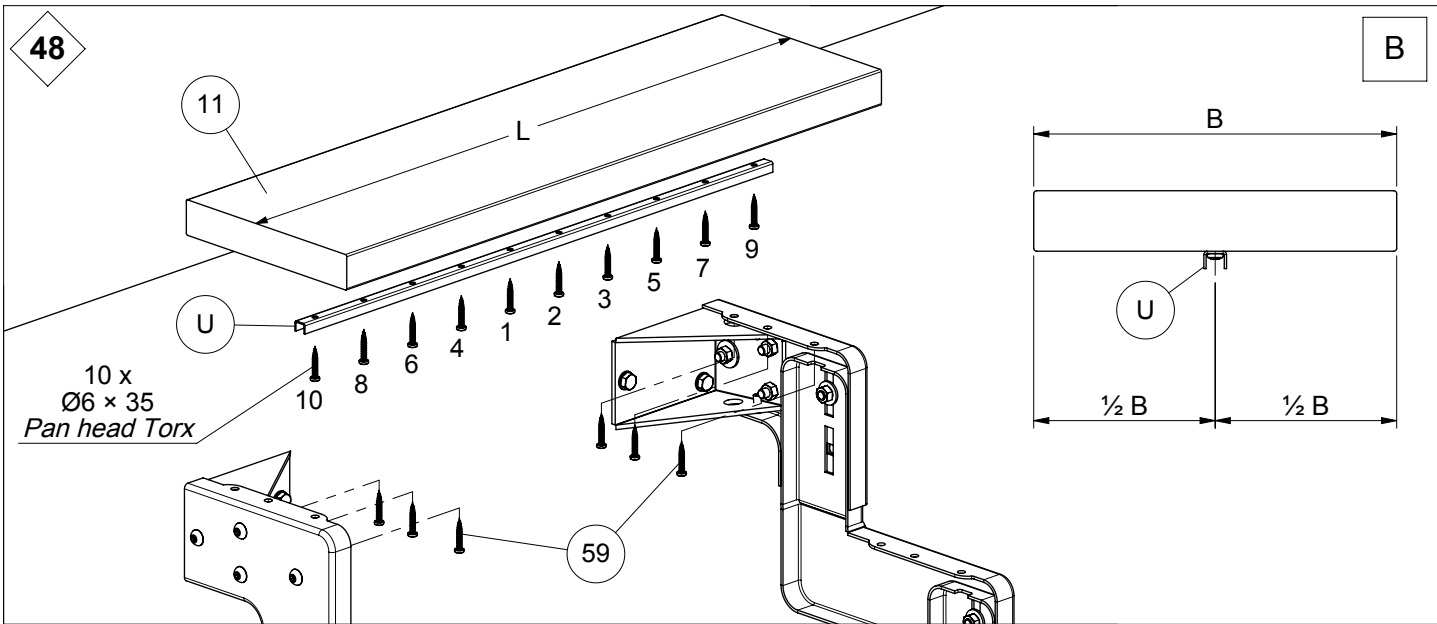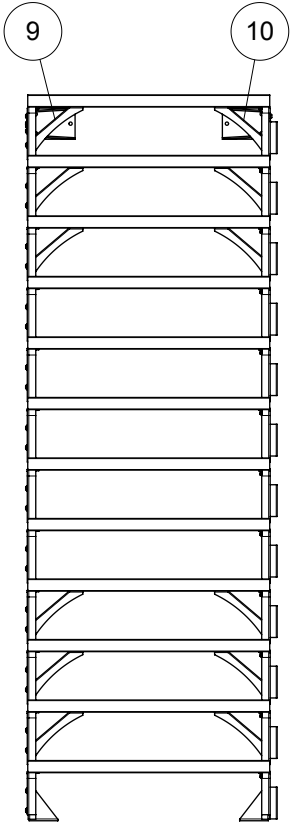


50

B

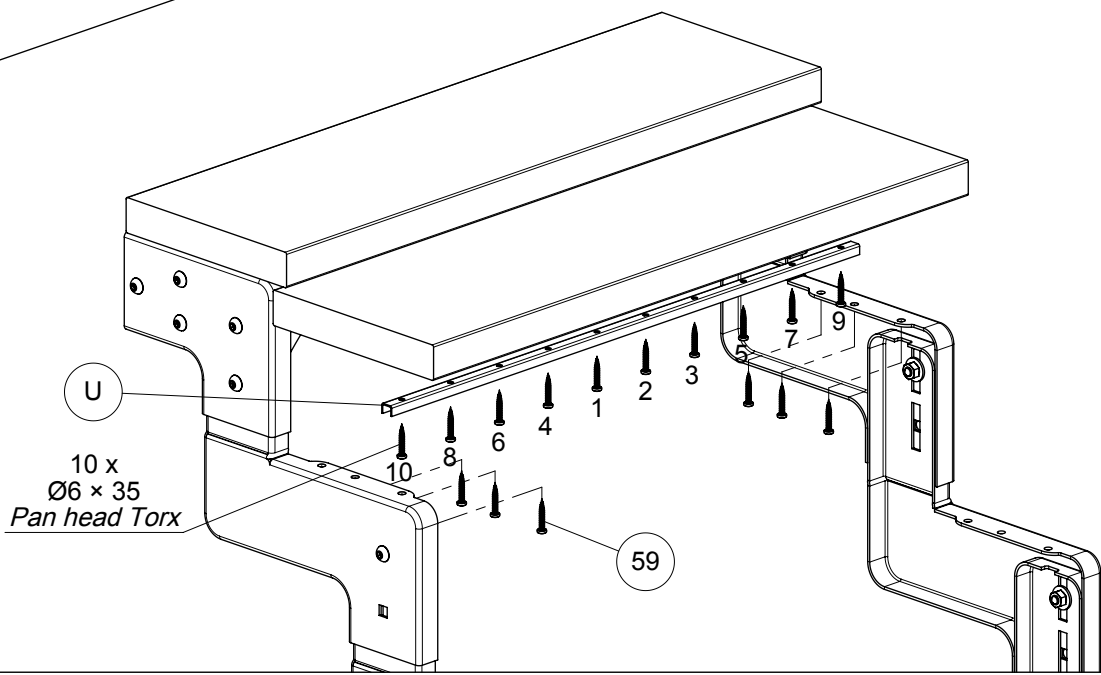

51

B

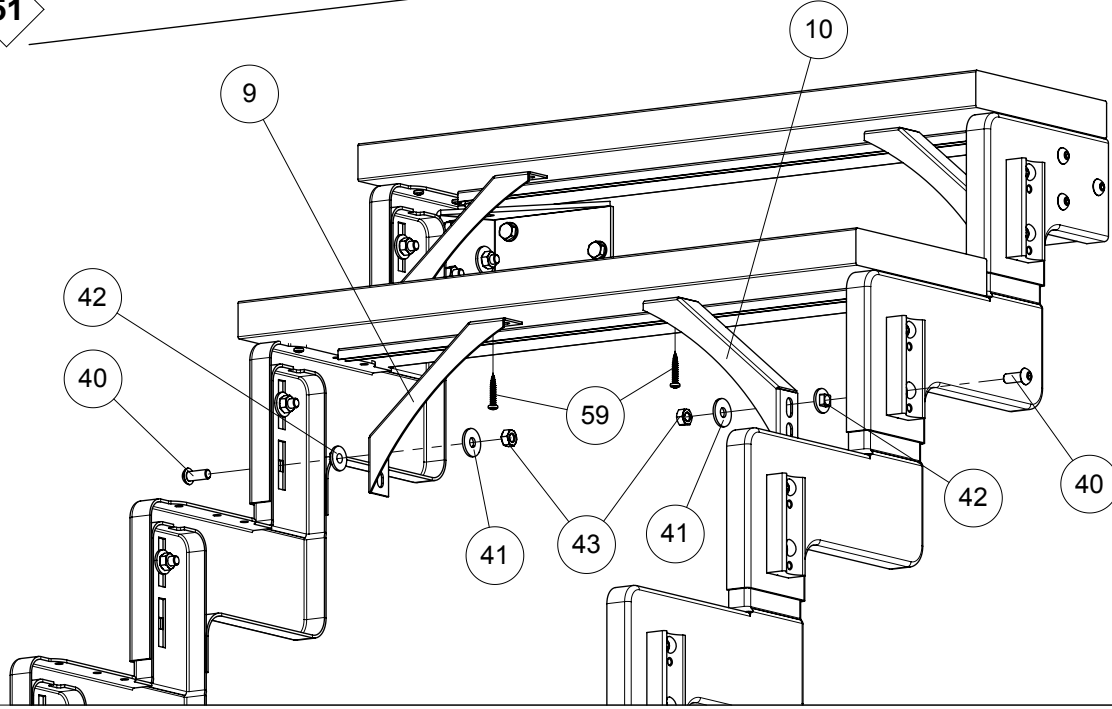

52

B

